

Met**STREAM** 105

User Manual

GILL

Data Solutions Platform

(Parts 1955-105-0X-XX)

Doc No: 1955-PS-0003

Issue 1



Gill Instruments Limited
Saltmarsh Park, 67 Gosport Street, Lymington,
Hampshire, SO41 9EG, UK
Tel: +44 1590 613500, Fax: +44 1590 613555
Email: anem@gillinstruments.com Website: www.gillinstruments.com

Contents

1.	FOREWORD.....	3
2.	INTRODUCTION.....	3
3.	SPECIFICATION	4
4.	PRE-INSTALLATION	6
4.1	Equipment supplied	6
4.2	MetStream 105 Part Numbers.	6
4.3	Packaging.....	7
4.4	Installation requirements.....	7
4.4.1	Host system.....	7
4.4.2	Software	7
4.4.3	Cables.....	7
4.4.4	Mounting	8
4.5	MetStream Connections.	8
4.5.1	MetStream Front Panel Connectors.....	8
4.5.2	Front Panel Status LED's.....	8
4.5.3	Front Panel USB 2.0 Port	8
4.5.4	MetStream Rear Panel Connectors.....	9
4.5.5	Rear Panel Power Socket.....	9
4.5.6	Rear Panel Ethernet Socket.....	9
4.5.7	RS232/422/485 Connector.....	10
4.5.8	Power enable function	10
5.	INSTALLATION.....	10
5.1	Installation Guidelines.....	10
5.1.1	MetPak to MetStream Data Input Connection.....	11
5.1.2	Ethernet to Ethernet Connection	12
5.1.3	Cable length	13
5.1.4	Ethernet Socket Cable Wiring	13
5.1.5	Power supplies	14
5.1.6	Power over Ethernet Connection.	14
5.2	Connections.....	14
5.2.1	MetStream RS232 Digital Input Connections.....	15
5.2.2	MetStream RS422 Digital Input Connections.....	15
5.2.3	Mechanical installation.....	16
5.3	MetStream External Protection Box - Part 1955-PK-052.....	17
6.	METSTREAM GRAPHICAL USER INTERFACE.....	19
6.1	Accessing the MetStream GUI using a PC and Ethernet Crossover Cable.	19
6.1.1	PC/Laptop Set Up using Gill MScan Software.	19
6.1.2	PC/Laptop Set Up if Gill MScan Software is not available.....	21
6.2	Accessing the MetStream GUI using a PC and a LAN Port Connection.....	23
6.3	Accessing the MetStream GUI with a PC and a Wi-Fi Router	25
6.3.1	Using an Ethernet cable connection between MetStream 105 and a Wi-Fi Router.....	25
6.3.2	Using a Wi-Fi connection between MetStream 105 and a Wi-Fi Router. .	28
6.4	MetStream Front Page GUI Features.	33
6.5	MetStream Configuration (Administrator Use).....	37
6.5.1	Login	37
6.5.2	Exit/Reboot/Shutdown/Thru Mode/Logout.....	38
6.5.3	Username and Password.....	39
6.5.4	Date and Time.....	40
6.5.5	Dashboard Settings (Administrator Use)	41
6.5.6	Data Logging.....	42
6.5.7	Input Device Settings.....	45

6.5.8	Network Settings	48
6.5.9	Weather Observation Website (WOW).....	50
6.5.10	About.....	51
6.5.11	Thru Mode (Diagnostic Connection).....	52
7.	MAINTENANCE & FAULT-FINDING	57
7.1	Maintenance	57
7.2	Fault-finding	58
7.3	Returning Units.....	58
8.	APPENDICES.....	59
8.1	Glossary & Abbreviations.....	59
8.2	Guarantee.....	60
8.3	Electrical Conformity.....	61

1. FOREWORD

Thank you for purchasing the MetStream 105 manufactured by Gill Instruments Limited. To achieve optimum performance we recommend that you read the whole of this manual before proceeding with use.

Gill products are in continuous development and therefore specifications may be subject to change and design improvements without prior notice.

The information contained in this manual remains the property of Gill Instruments and should not be copied or reproduced for commercial gain.

2. INTRODUCTION

The Gill MetStream 105 is a robust unit which allows connection of a Gill Instruments MetPak Range Weather Station to its Digital input and with the use of its Ethernet Output or Wi-Fi output to a Router allow Weather Data to be viewed and logged over a PC network.

The MetStream 105 can be used in conjunction with a Wireless Router, LAN or PC.

After you have successfully set up the MetStream 105, we strongly advise that you then go back and read the rest of the manual to ensure that you get the best results from the MetStream 105.

3. SPECIFICATION

MetStream 105 - Parts 1955-105-0X-XX

Input Power Requirement (MetStream only)

Voltage	9-30V DC
Current	250mA max@12V DC (3W) MetStream 105 600mA max @ 12V DC, (7.2W max) including external sensor

Power over Ethernet

Built-in receiver (IEEE 802.3af-2003)

Wi Fi

Transmit Power	- +15dBm typical for both 802.11 b and g
Baseband Modulation – WiFi	- 802.11g: OFDM - 802.11b: DSSS/CCK
Receiver Sensitivity – WiFi	- 54 Mb/s @ -74 dBm OFDM - 6Mb/s @ -90 dBm OFDM - 11Mb/s @ -88 dBm CCK - 1Mb/s @ -90 dBm DSSS

Output Power

Voltage	Regulated 12V DC $\pm$ 10%
Current	Up to 300mA @ 12V DC

Digital Input

Communication	ASCII, RS232, RS422/485 4 wire, full duplex
Baud rates	1200, 2400, 4800, 9600, 19200, 38400, 57600
Formats	8 data, odd, even or no parity
Data Input Rate	Up to 20Hz

Digital Output

Format	8P8C
Communication	Ethernet 10/100 BASE-T speeds/format

Internal Storage

Micro SD Card	4GB with operating system and enough storage to log 1Hz data for 1 month.
---------------	---

External Data Storage

USB 2.0 Port	Expansion port supplied for external USB Data Storage, max of 32GB supported.
--------------	---

Start Up Time

Data Ready	Less than 90 seconds (MetStream box) from power up.
------------	---

Dimensions

Size	125mm long, 111mm wide, 34mm deep, antenna folded 205mm long with antenna extended.
Weight	0.28kg.

Materials

External Construction	Aluminium and Plastic
-----------------------	-----------------------

Environmental

Moisture protection	IP40 IP65 with optional Gill outdoor enclosure
Operating temperature	-20°C to +70°C
Storage temperature	-40°C to +80°C
Humidity	<5% to 95% RH
EMC	BS EN 55024:2010 BS EN 55022:2010
FCC	CFR47 Part 15B

Standards

Traceable to UK national standards

MetStream Power Supply Unit - Part 026-04969

(Supplied with all MetStream Parts 1955-105-0X-XX)

Input Voltage Range	100v to 240V AC @ 300mA max (50/60Hz)
Mains Adaptors	UK, Euro, US and AUS types supplied.
Output Power	
Voltage	Regulated 12V DC $\pm$ 2%
Current	Up to 1 Amp (over current and short circuit current protected).
DC Cord	1.5 metres long with right angled 2.1 C +ve plug.
Dimensions	
Size	79mm long x 55.4mm wide x 37mm deep.
Weight	150 grams.
Materials	
External Construction	Plastic, PB free ROHS compliant.
Environmental	
Operating temperature	0°C to +40°C
Storage temperature	-20°C to +60°C
Humidity	5% to 95% RH
EMC	BS EN 55024:2010 BS EN 55022:2010
FCC	CFR47 Part 15B
EMI	BS EN55022
	FCC (Part 15 Class B)
SAFETY	UL60950-1

MetStream External Protection Box - Part 1955-PK-052

(Supplied with MetStream Part 1955-105-02-XX)

Dimensions	
Size	335mm long x 220mm wide x 107mm deep.
Weight	1.5kg
Maximum Cable size	5 x 2.5 mm sq.
Materials	
External Construction	Thermoplastic.
Environmental	
Moisture protection	IP65
Install Temperature	0°C to +40°C
Operating temperature	-20°C to +70°C

4. PRE-INSTALLATION

4.1 Equipment supplied

MetStream 105.

Universal Ac supply input, 12v dc 1A output supply.

2 Metre one to one Ethernet lead.

1 Metre crossover Ethernet lead.


MetStream IP address MScan Software, on the CD.

MetStream 105 User Manual on the CD (this manual).

MetPak terminal block 8-way connector.

2.1mm, 12v dc Power Plug.

4.2 MetStream 105 Part Numbers.

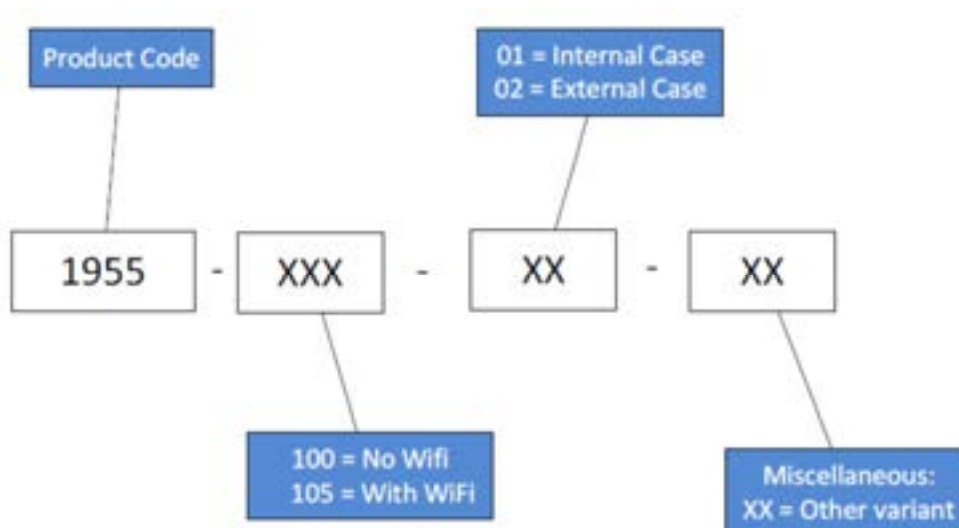

Available spare parts and optional extras are as detailed below:-

Item	Part Number
MetStream 105 (Supplied unit).	1955-105-0X-XX
Mains powered 12v dc Power Supply (Supplied with MetStream).	026-04969
Ethernet Cable (one to one) 2 Metres long (Supplied with MetStream).	026-04970
Ethernet Crossover cable 1 Metre long (Supplied with MetStream).	026-05073
8 way Spring terminal block (Supplied with MetStream).	020-04277
External Protection Box (Supplied with part 1955-105-02-XX).	1955-PK-052

4.3 Packaging

Whilst the MetStream 105 is being moved to its installation site, the unit should be kept in its packaging. Retain the packaging for use if the unit has to be moved or returned to Gill Instruments.

4.4 Installation requirements

4.4.1 Host system

Select from the following:

- Router with Ethernet input.
- Or Wi Fi Modem with Ethernet input.
- Or LAN Ethernet input.
- Plus PC with Wi Fi or Ethernet input to view MetStream Data.
- Internet Browser (we recommend Firefox, Chrome or IE9.0 or later)
- Optional USB 2.0/3.0 data stick to export store logged data.
- Gill Instruments MetPak Range Unit set for ASCII, RS232, RS 422 output (see <http://www.gillinstruments.com/products/anemometer/weather-station-range.htm> for the range of MetPak units).

4.4.2 Software

- Gill MScan Software to detect the MetStream IP address.
 - Note MScan app works on Windows devices.

4.4.3 Cables

- **To connect MetStream to the host unit (e.g. MetStream 105 to a MetPak unit).**

Use a suitable RS232 or RS422/485 cable, there are restrictions on cable type and length for suitable operation, refer to the connecting equipment Manual.

- **To connect the MetStream 105 to an Ethernet port.**

Use a CAT 5 CAT5e or CAT 6 cable to connect between the MetStream 105 and the user interface equipment.

Ethernet cables of up to 100 metres can be supported.

A 2 Metre Ethernet test cable is supplied (non-crossover type).

- **To connect the MetStream 105 directly to a PC.**

Use a CAT 5 CAT5e or CAT 6 crossover cable to connect between the MetStream 105 and the PC Ethernet port.

Ethernet cables of up to 100 metres can be supported.

A 1 Metre Ethernet crossover test cable is supplied.

- **To connect DC power to the MetStream unit**

A 12v dc power supply and lead with wired connector are supplied otherwise use a cable suitable for connecting a dc supply of nominally 12v dc (1 amp recommended). If requiring full current then take into account volt drops if a long cable run is needed.


Alternatively a 2.1mm, 12v dc plug is provided if it is required to connect to a user 12v dc power supply to MetStream.

4.4.4 Mounting

- The MetStream 105 is designed for indoor use.
- The MetStream 105 can be positioned laid flat down or on its side.
- For outdoor use the unit should be enclosed in a box that provides the necessary sealing that will meet the outdoor climatic conditions. Gill instruments can provide an outdoor box if required part number 1955-PK-052.

4.5 MetStream Connections.

4.5.1 MetStream Front Panel Connectors

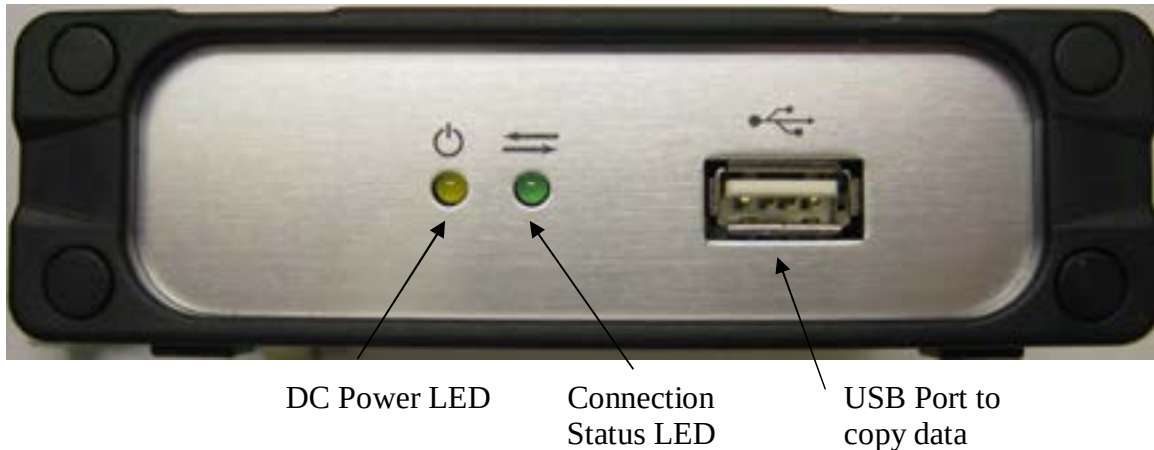

4.5.2 Front Panel Status LED's

The Yellow LED illuminated indicates DC Power is applied to the MetStream Box. The Green LED illuminated indicates unit connecting/connected to a user unit. A flashing Green LED means that MetStream is communicating with the connected instrument.

When power is applied to the MetStream with valid equipment wired to the RS232/422/485 connector the Green LED will be:-


- Off initially for approximately 10 seconds.
- On for approximately 20 seconds.
- Flash whilst correct communication (Comms Mode and Baud Rate) with the connected device is being established.
- On continuously when the connected instrument is recognised and data is ready to be read.

However allow up to 90 seconds for a valid connection to be established depending on equipment connected.

4.5.3 Front Panel USB 2.0 Port

Suitable for a USB data stick to copy files from MetStream only.
Maximum 32GB device supported.
Hot Pluggable.

4.5.4 MetStream Rear Panel Connectors

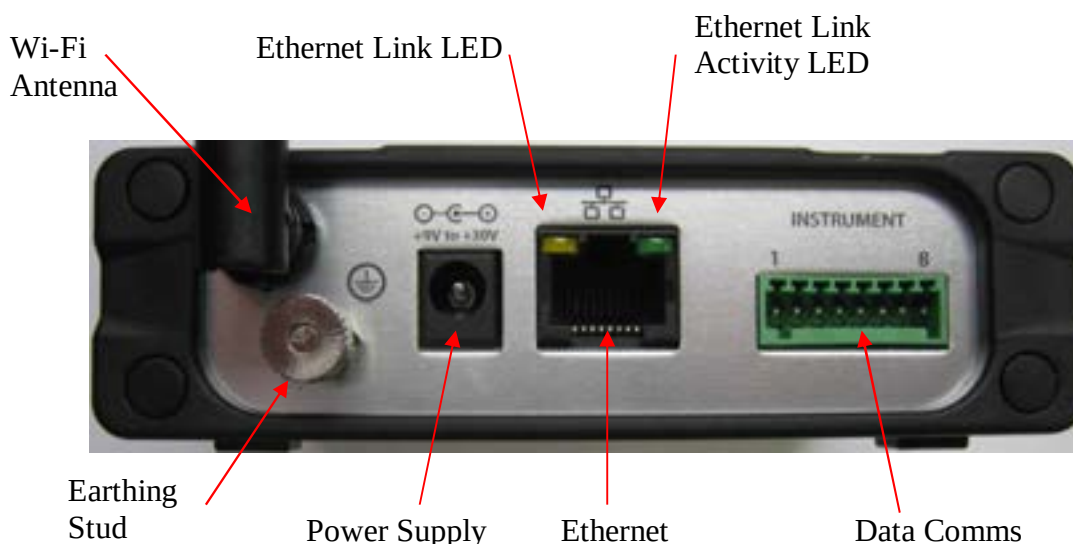

4.5.5 Rear Panel Power Socket

Two contact power socket

Voltage Range


Input Current

Use with 2.1mm x 5.5mm plug (see below).

9v to 30v dc.

Up to 250mA @12V from MetStream.

Up to 0.6A @12V, MetStream and external device.

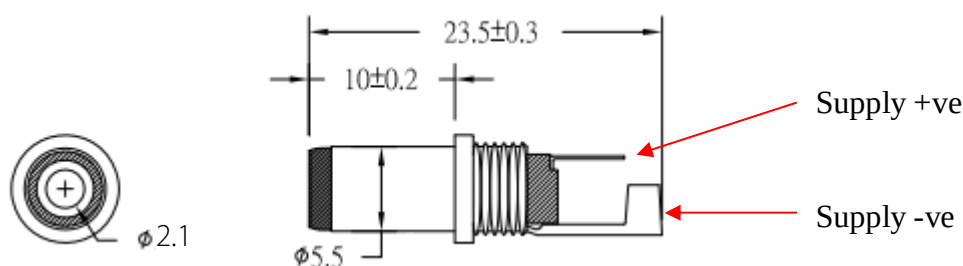

4.5.6 Rear Panel Ethernet Socket

A standard Ethernet socket is provided for connecting:-


The supplied 2 metre Ethernet cable for a Local Area Network (LAN) connection

Or


The 1 Metre Ethernet crossover cable for direct connection to a PC.

Other length Ethernet cables can be used:-

If there is a successful connection between the MetStream Ethernet socket and LAN then the Yellow Ethernet Socket LED's will be illuminated and the Green LED will indicate Data traffic activity.

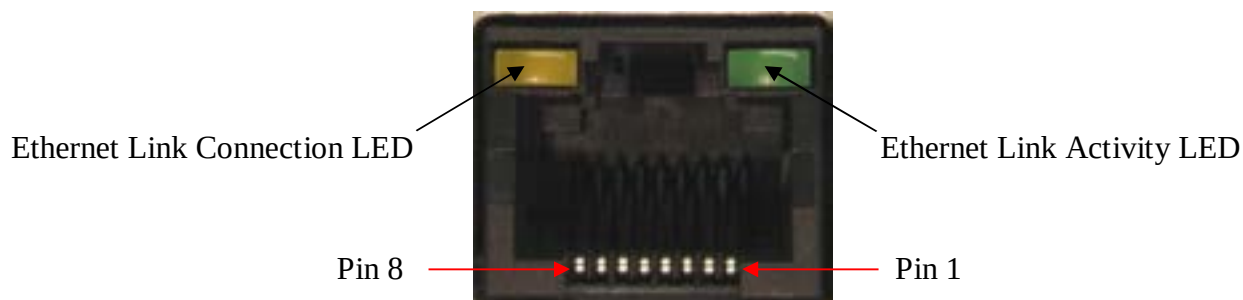

4.5.7 RS232/422/485 Connector

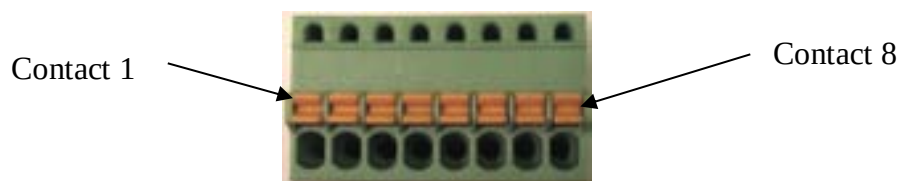

A removable 8 way plug is supplied for the RS232/422/485 data input connections. The part number for the plug is Phoenix Contact 8 way spring terminal Part 1881383.

Connections to the RS232/422/485 connector are

CONTACT/ COMMS MODE	1	2	3	4	5	6	7	8
RS232	Rx+-	-	-	Tx-	+12v dc Output	Power Enable	0v	0v
RS422/485	Rx+	Tx+	Rx-	Tx-	+12V dc Output	Power Enable	0v	0v

Recommended range of wire gauges that can be used with the connector is 20 AWG to 28 AWG.

Wires connected to this plug should be stripped back 8 mm for insertion into the push/lock connector.

4.5.8 Power Enable Function

The +12v dc output is only enabled on Terminal 5 when the **Power Enable connection** on Terminal 6 is connected to Terminal 7 (0v) or Terminal 8 (0v).

If Terminal 6 **Power Enable** is left open circuit then the 12V supply output from Terminal 5, and any connected instrument using this supply, will be disabled.

In this case, the external instrument should be powered separately from the MetStream by a customer-provided supply.

5. INSTALLATION

NOTE: Warranty is void if the MetStream case is opened.

5.1 Installation Guidelines

- The MetStream 105 is designed for indoor use.
- For outdoor use a suitable sealed enclosure that meets the required environmental conditions can be used.

- Gill instruments can supply an outdoor IP65 enclosure; refer to the technical specification in the front of this manual to ensure it meets the required conditions of use.
- Ensure the product is correctly earthed in accordance with this manual.
- Use cables recommended by Gill, keeping the length below the maximum allowed. Where the cables are cut and re-connected (junction boxes, plugs and sockets) the cable screen integrity where applicable must be maintained, to prevent the EMC performance being compromised.
- Earth loops should not be created – earth the system in accordance with the installation guidelines.
- Ensure the power supply operates to the MetStream 105 specification at all times.
- The MetStream 105 product uses Wi-Fi in the 2.4GHz region. When the Wi-Fi connection is used, the unit should be placed away from objects that could interfere with the signal.
 - Do place the unit
 - In open spaces
 - Above floor/ground level where possible
 - Within line of sight of the Wi-Fi base station or router
 - Do not place the unit
 - On or near metal surfaces
 - Next to thick walls or structures
 - Next to sources of electronic interference such as PCs.

Bench system test

Note: Prior to physically mounting the MetStream 105 in its final location, we strongly recommend that a bench system test be carried out to confirm the system is configured correctly, is fully functional and electrically compatible with the selected host system and cabling (preferably utilising the final cable length). The required data format, units and other options should also all be configured at this stage.

5.1.1 MetPak to MetStream Data Input Connection

The following table shows an example manufacturers' reference; other manufacturers' equivalents can be used.

Recommended Belden cable types

Application	No. of Pairs	Belden Ref.
Digital RS232	3	9503
Digital RS422	4	9504

For RS422 operation the cable should contain twisted pairs screened to match the application.

Cable length

The maximum cable length is dependent on the chosen communication method.

The following table shows the maximum cable lengths for the supported communication protocols at the given baud rates, using the recommended cable. If any problems of data corruption etc. are experienced, then a slower baud rate should be used. Alternatively, a higher specification cable can be tried.

Maximum cable lengths for supported communication networks

Communication format	Baud rate	Max. cable length
RS232	19200	6.5M
RS422	19200	1000M

Cabling (unused wires)

Any unused wires in the connecting cables should be connected to ground preferably at the user equipment end.

Cabling protection

Cables should be secured:-

With cable clamps or equivalent at regular intervals such that the hub box cable gland does not support the cable weight.

Away from any mounting bolts to prevent chaffing of the cable.

NOTE: Install appropriate strain relief support to the cable if required.

Earthing

To ensure correct operation and for maximum protection from lightning, a separate lightning rod system is recommended to protect the system.

You can also earth the MetPak through its mountings or by connecting a grounding cable to the MetPak Earth Terminal Post. Clean off any paint etc. that might prevent a good connection to the Earth structure.

When you connect the screened communications cable ensure that the screen has a connection to the MetStream Case.

5.1.2 Ethernet to Ethernet Connection

An Ethernet compatible cable should be used.

Generic description:—

2 Twisted pairs for Data only application.

4 twisted pairs for Data and Power over Ethernet (POE) applications.

CAT5 or higher RJ45.

8 pin 8 contact type (8P8C).

Max Cable Length 100 metres (Cat 5, Cat 5e, Cat 6).

Types - straight or crossover depending on system connection.

Shielded Twisted Pair (STP) recommended or Unshielded Twisted Pair (UTP).

The table below shows some set up cable options.

Cable type required for setup

	PC	Wi Fi Router	LAN
MetStream to:-	Crossover	Straight	Straight

5.1.3 Cable length


The typical maximum length at Ethernet 10Mbps data rate is 100 Metres, using the recommended cable.

If any problems of data corruption are experienced (due to, for example, a high local electrical 'noise' level), then check that a shielded Ethernet twisted pair cable is being used. Alternatively, a thicker or higher specification cable can be tried.

5.1.4 Ethernet Socket Cable Wiring

The rear Ethernet RJ45 socket on the MetStream unit has the following connections:-

10Base T Port Pin outs.

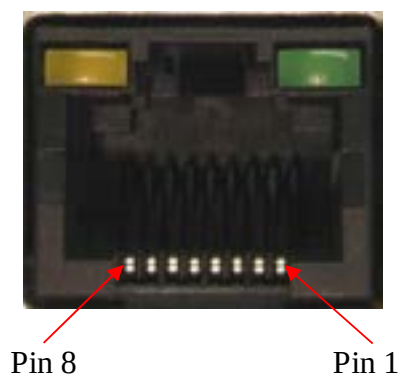

IEEE 802.3af connections using spare pairs for POE.

8 Pin ⁸	Description	TIA/EIA 568A	TIA/EIA 568B
1	Transmit+	White/Green	White/Orange
2	Transmit -	Green	Orange
3	Receive+	White/Orange	White/Green
4	DC+	Blue	Blue
5	DC+	White/Blue	White/Blue
6	Receive -	Orange	Green
7	DC-	White/Brown	White/Brown
8	DC-	Brown	Brown

Pins 4, 5, 7 and 8 are not used unless a Power over Ethernet connection is used. Ensure that a fully 8 wire populated cable is used for POE applications.

5.1.5 Power supplies

MetStream 105 units

Input Supply: -

Voltage	9v to 30v DC.
Current	250mA max@12v DC (excludes external USB flash drive and MetPak unit).
Current	600mA max@12v DC including external Sensor.


5.1.6 Power over Ethernet Connection.

It is possible to Supply Power to a MetStream 105 and connected MetPak unit for instance through the use of a Single Port MidSpan PoE Injector.

Typically the Power over Ethernet device will inject 48v dc on the Ethernet cable to connect to the MetStream 105 unit.

Maximum cable length between The POE injector and MetStream should be 100 Metres
Connect MetStream Ethernet lead to the Power and Data connection socket.

Typical MetStream System Connection using Power over Ethernet.

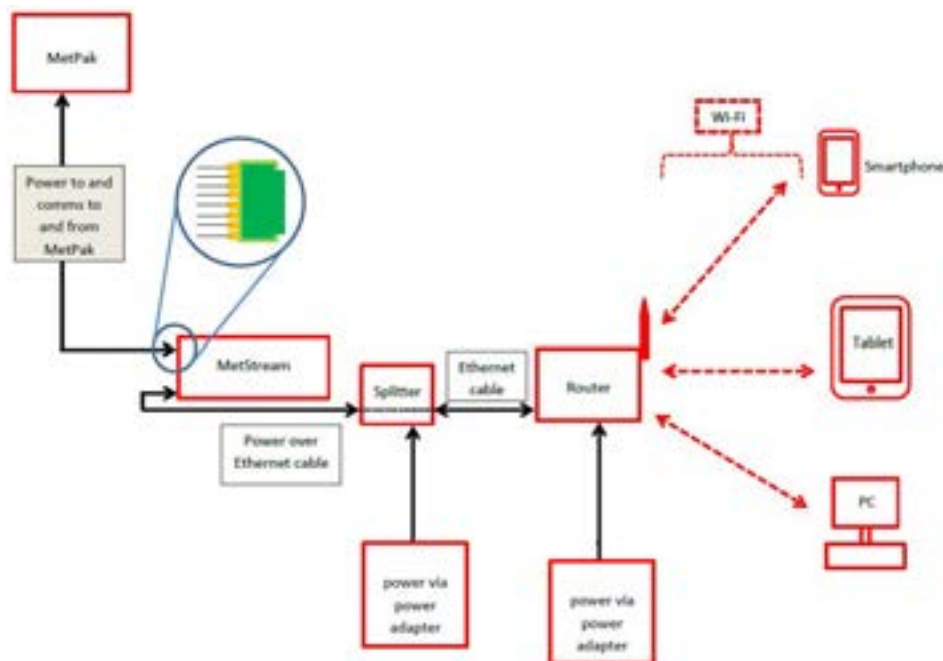

5.2 Connections

Important:- Any cable wires not used should be isolated and grounded at the terminating equipment/user end.

Digital OV should be used in conjunction with RS422 TX RX lines in order to improve noise immunity.


Earthing or grounding

It is recommended that MetStream metal case is grounded via its Knurled Screw Earth Terminal.

5.2.1 MetStream RS232 Digital Input Connections


The following example shows a MetPak with its COMMS set for RS232 connected to MetStream. This is the MetPak default communication configuration setting.

NOTE: The 8 way connectors fitted to MetStream and Metpak are identical, take care when connecting the lead to the equipment to ensure that cable wiring matches that required of the connecting equipment.

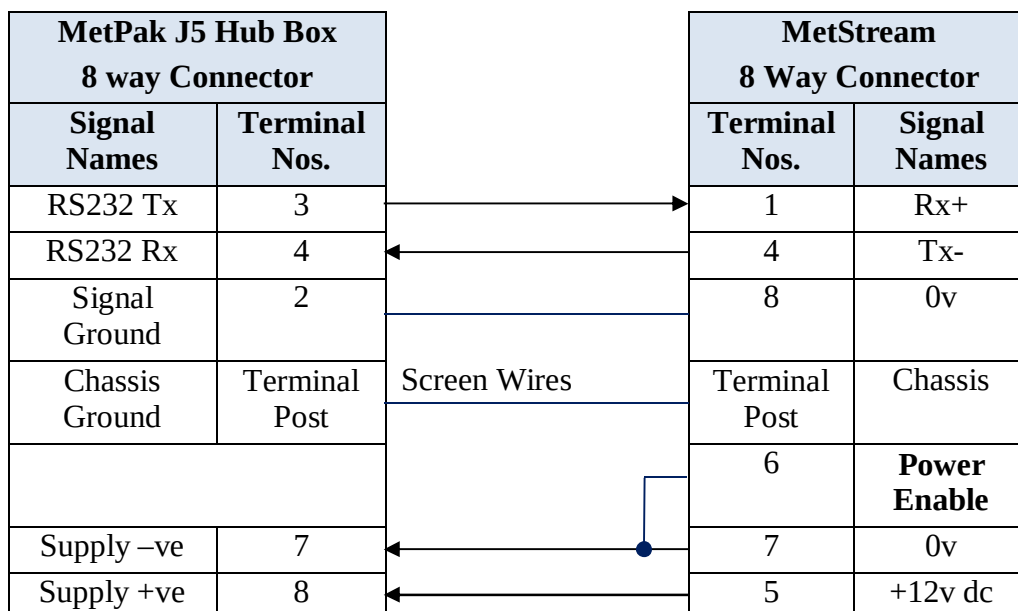

5.2.2 MetStream RS422 Digital Input Connections

The following example shows a MetPak with its COMMS set for RS422 connected to MetStream. This is not the default MetPak communications setting; ensure the MetPak has been configured for this output requirement before wiring to MetStream.

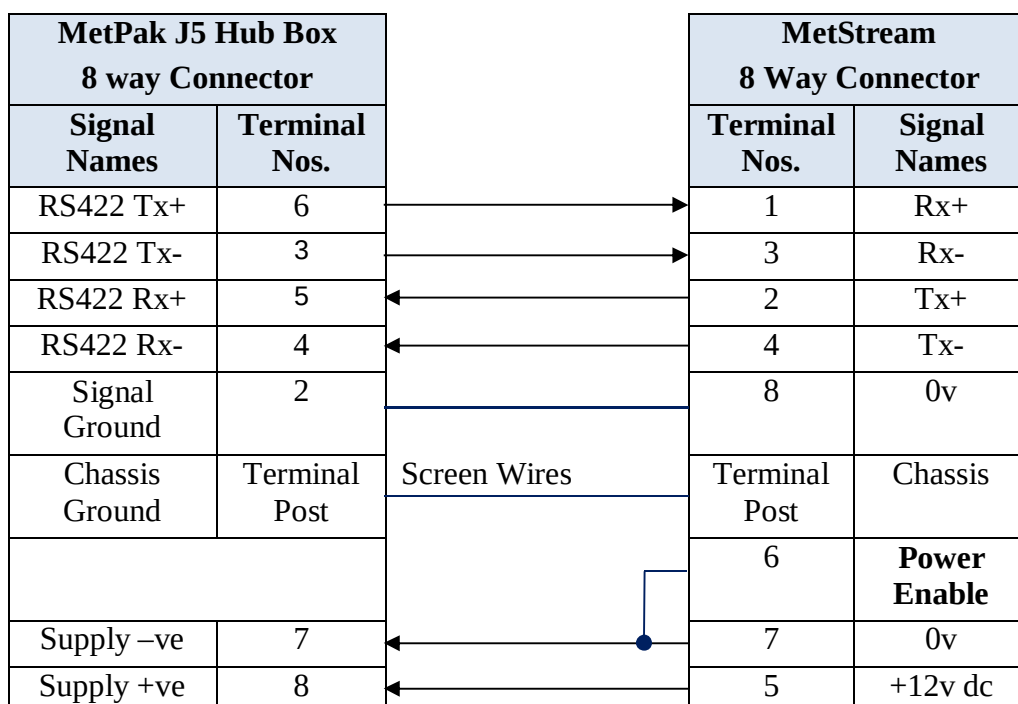

5.2.3 Mechanical installation

Before installing, a bench system test is recommended.


All the time the MetStream 105 is not in its final location, it should be protected from damage by keeping it in the original packaging as long as possible.

Location

It is advised to not site the MetStream 105 in close proximity of electrical noise, Radar or RF transmitters. A site survey may be required if there is any doubt about the strength of external electrical noise.

Orientation

The unit may be mounted in any orientation.

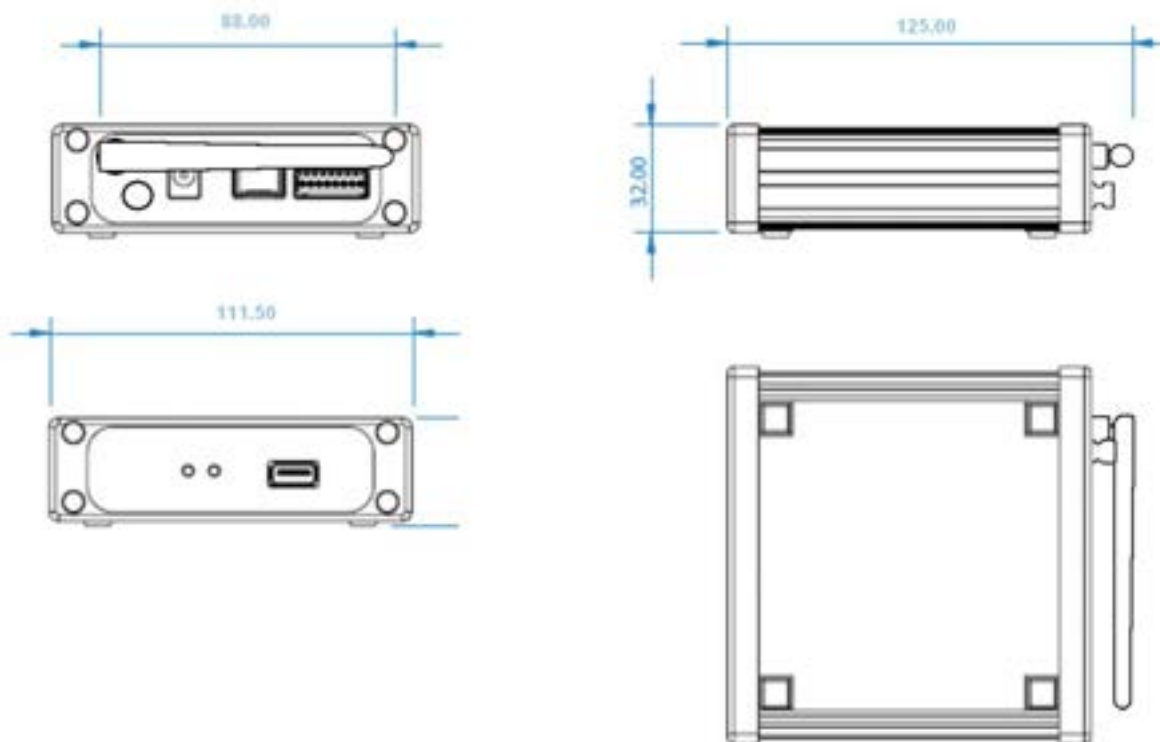

Dimensions are in mm

5.3 MetStream External Protection Box - Part 1955-PK-052

(Supplied with MetStream Part 1955-105-02-XX).

Note the environmental temperature conditions etc. under which the Protection Box and MetStream will be used to ensure there is no conflict (see manual Specification pages 4 and 5).

Outer Case Dimensions (with cover in place) 335mm long x 220mm wide x 107mm deep.

Case Preparation and Mounting

The case should be mounted on a vertical surface with cable entries at the bottom. The case should be mounted onto a flat surface to prevent twisting that could affect sealing.

Do not drill any holes in the enclosure apart for those for waterproof glands as this could impair on the IP65 weather proof rating.


A template (not to scale) is shown to aid mounting hole positioning (units in mm).



To install the MetStream unit remove the case lid, loosen the 2 Philips screws identified below, slide the clamp plate to the right.

Slide in the MetStream unit as shown and clamp in MetStream and tighten the 2 screws. Connect the supplied pre-wired Earth Tag, Power and 8 Way MetStream plugs to MetStream.

Installed cable connections are as follows:-

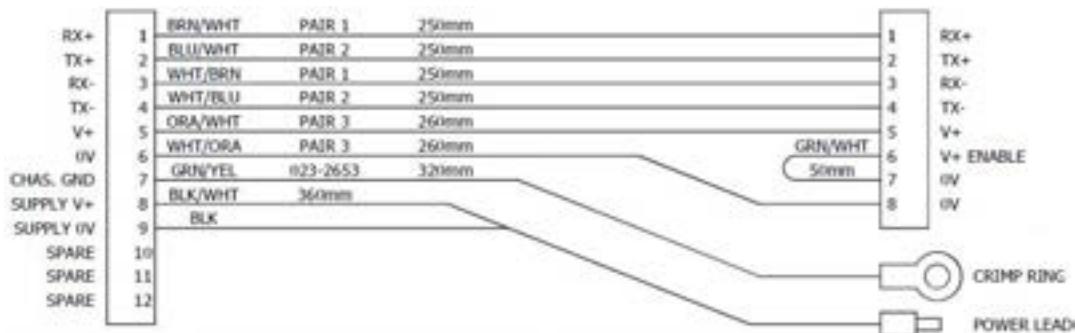

Connect external Power and Communications to the MetStream via the sealing strip or gland entry points and terminate in the 12 way screw fitting connector block.



Protection Box Case

Loosen these 2 screws to slide the clamp plate to the right

Gland entry for cables 8mm to 13mm in diameter.

Rubber Sealing Strip entry points for clamping and sealing cables up to 2.5 sq. mm.

6. METSTREAM GRAPHICAL USER INTERFACE

The MetStream 105 output can be viewed in a Graphical User Interface (GUI) by connecting directly to a PC/Laptop or via a Wi Fi or Ethernet LAN connection and opening a Web Page (Internet Explorer 9 or Mozilla Firefox 19.0.2 are recommended, earlier versions may not be suitable). This then allows the user to view data and those with password access to retrieve logged data and change GUI settings.

Parts required:-

MetStream 105 and Power Supply (supplied).

Ethernet 1 metre crossover cable (supplied).

Ethernet 2 Metre non crossover cable (supplied).


Gill MScan Software (supplied on the CD).

Computer preferably running Internet Explorer version IE9 (Chrome) or Mozilla Firefox 19.0.2.

MetPak Range Unit or suitable connecting device.

6.1 Accessing the MetStream GUI using a PC and Ethernet Crossover Cable.

First connect equipment as per the following system diagram.

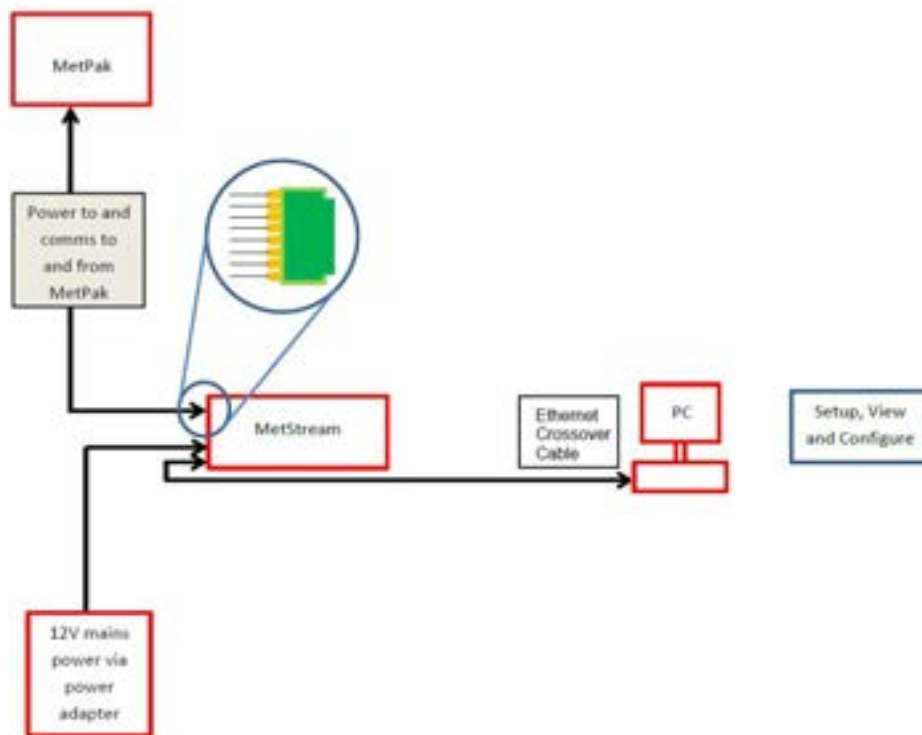

Now apply power to the MetStream 105, wait for 90 seconds before attempting to access it for data.

6.1.1 PC/Laptop Set Up using Gill MScan Software.

If the PC/laptop has a Wi Fi connection then temporarily disable this function to connect to MetStream via a direct Ethernet crossover cable connection.

Note: - It is recommended to connect the MetPak or connected device to MetStream to ensure correct configuration, however it is possible to set up MetStream parameters without the connected device.

Load and Open Gill MScan Software on to the PC from the supplied CD.


Select 'Direct Connection between PC and MetStream'.

Click on the 'Find MetStream(s)' button.

A MetStream should be found at 192.168.67.67.

Click on MetStream Found at 192.168.67.67 to highlight the MetStream IP Address.

Click on 'Connect to MetStream'.

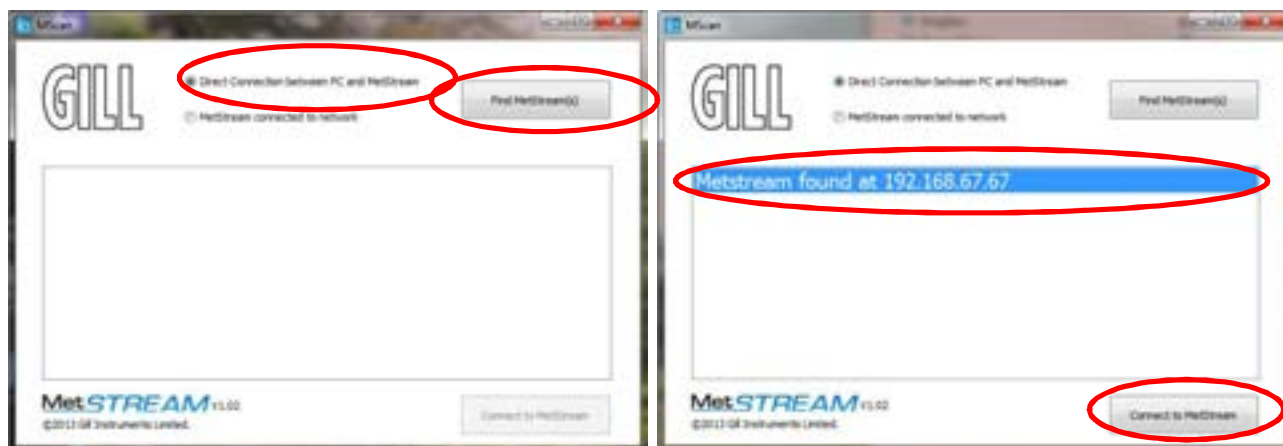


Your default browser will be launched and connect to the MetStream homepage

If the opening MetPak screen does not appear to reflect the currently connected equipment then clear the Browser Cache and refresh the display.

In Chrome the cache can be cleared by selecting 'Customise and control Google Chrome/History/Clear browsing history'. Then select only 'Empty the cache'.

Now Configure or retrieve MetStream data as per Para 6.5.

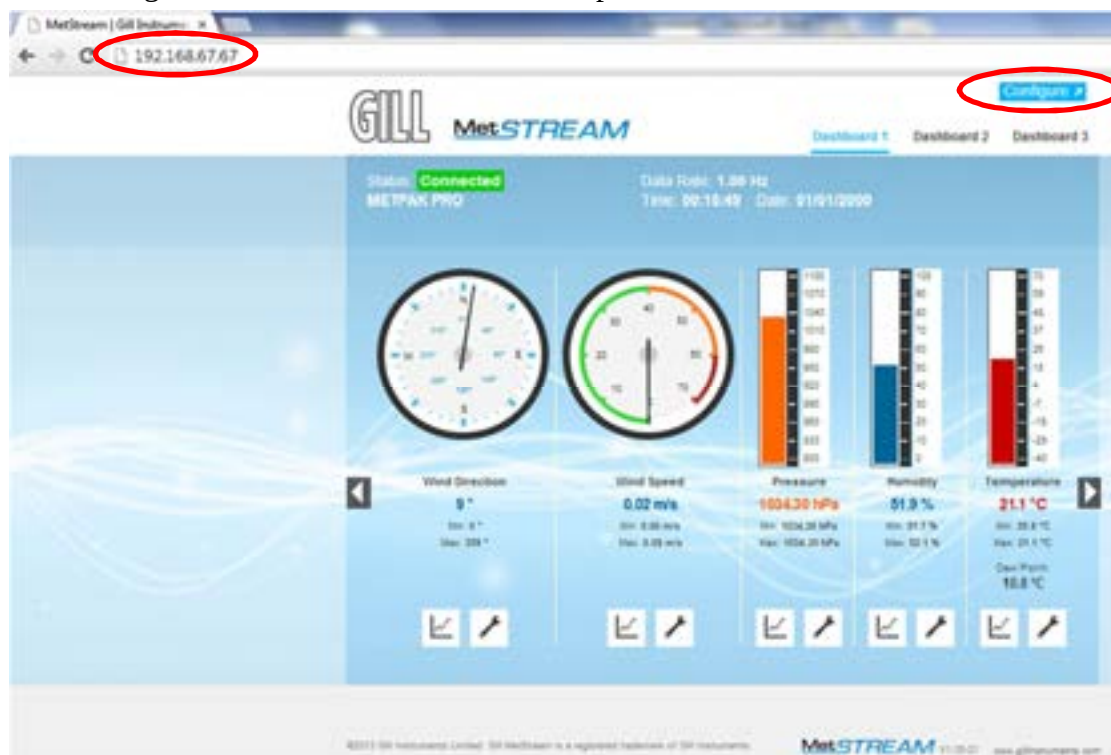

6.1.2 PC/Laptop Set Up if Gill MScan Software is not available.

If the PC/laptop has a Wi Fi connection then temporarily disable this function to connect to MetStream via a direct Ethernet crossover cable connection.

Apply power to MetStream 105 (wait for 90 seconds before attempting to access it for data).

On the PC select Start/

Select/

Control Panel/

Network and Sharing Center/

Local Area Connection/




Properties.

Double click on:-

Internet Protocol Version 4 (TCP/IPv4).

Now click on:-

'Use the following IP address'.

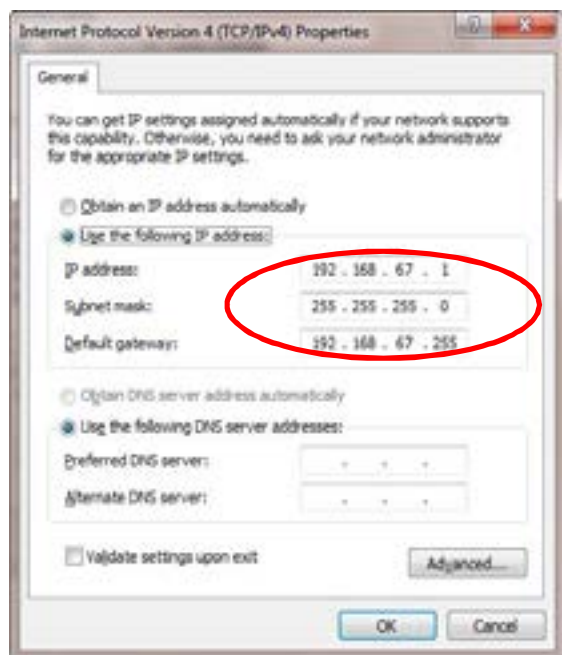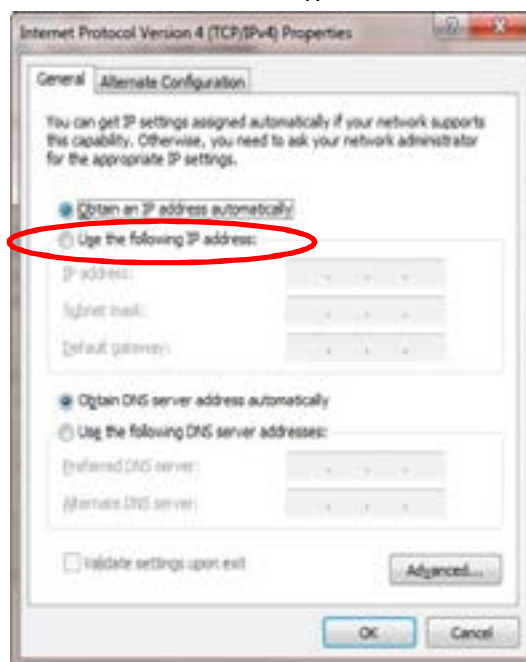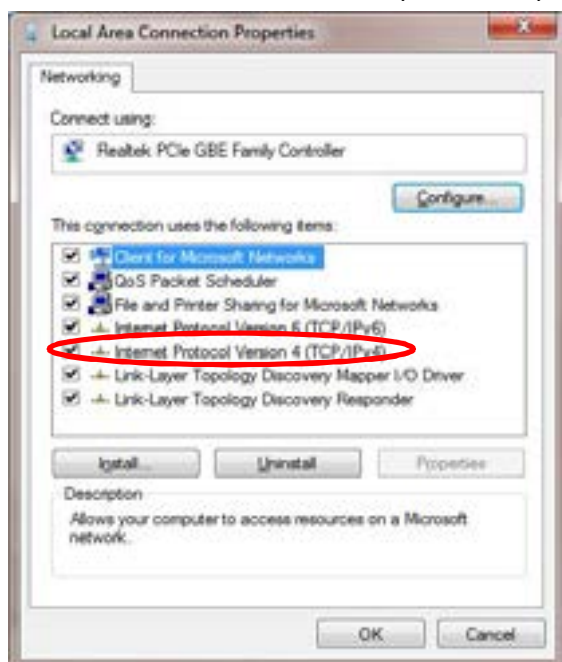

Type in the PC IP address **192.168.67.1** (cannot be the same as the MetStream default IP address 192.168.67.67).

Type in Subnet Mask **255.255.255.0**.

Type in Default gateway **192.168.67.255**.

Click on OK.


On the PC open Internet Explorer (or equivalent) browser window.

Type in a default MetStream IP address 192.168.67.67. This IP address can be used irrespective of any fixed IP address that may have been previously set.


If the opening MetPak screen does not appear to reflect the currently connected equipment then clear the Browser Cache and refresh the display.

In Chrome the cache can be cleared by selecting 'Customise and control Google Chrome/History/Clear browsing history'. Then select only 'Empty the cache'.

Now Configure or retrieve MetStream data as per Para 6.5.

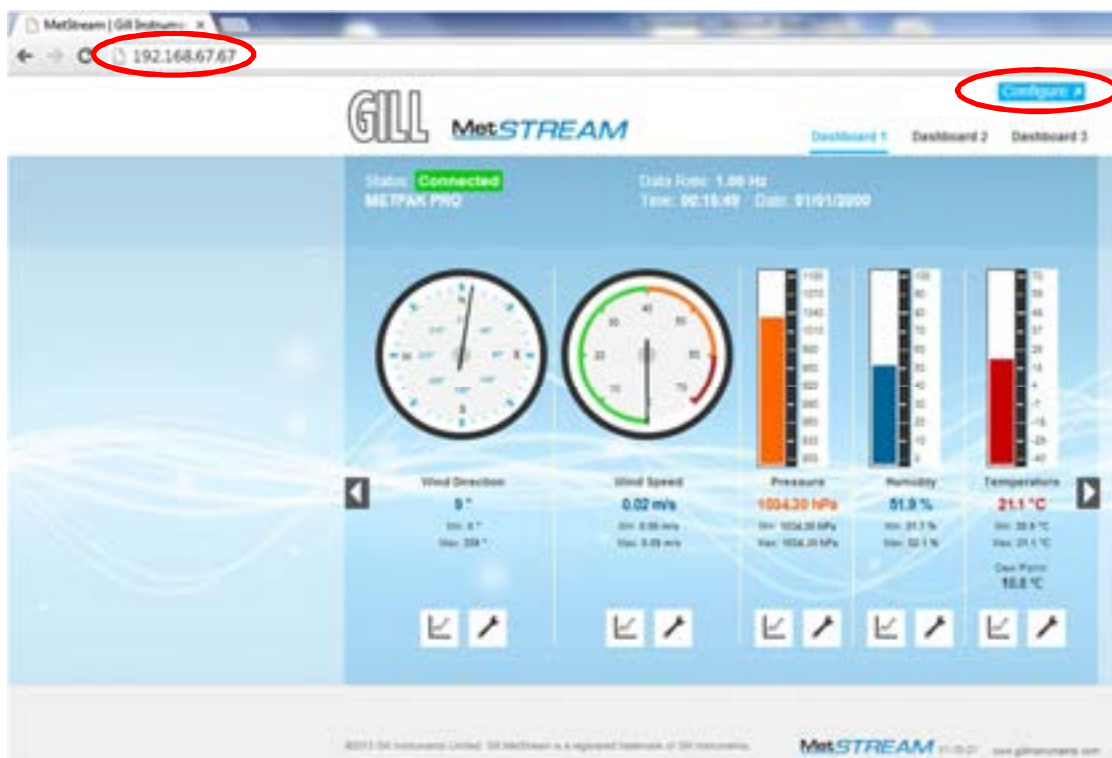

Upon completion of configuration to return the PC/Laptop to its previous state then:-

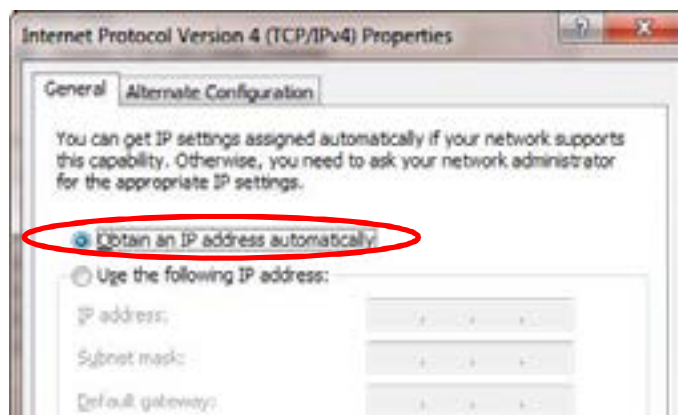


On the PC select Start/Select/Control Panel/Network and Sharing Center/Local Area Connection/Properties.

Double click on Internet Protocol Version 4 (TCP/IPv4).

Click on Obtain an IP address automatically and then click OK etc.

Re-enable the PC/Laptop wireless function as appropriate.

6.2 Accessing the MetStream GUI using a PC and a LAN Port Connection.

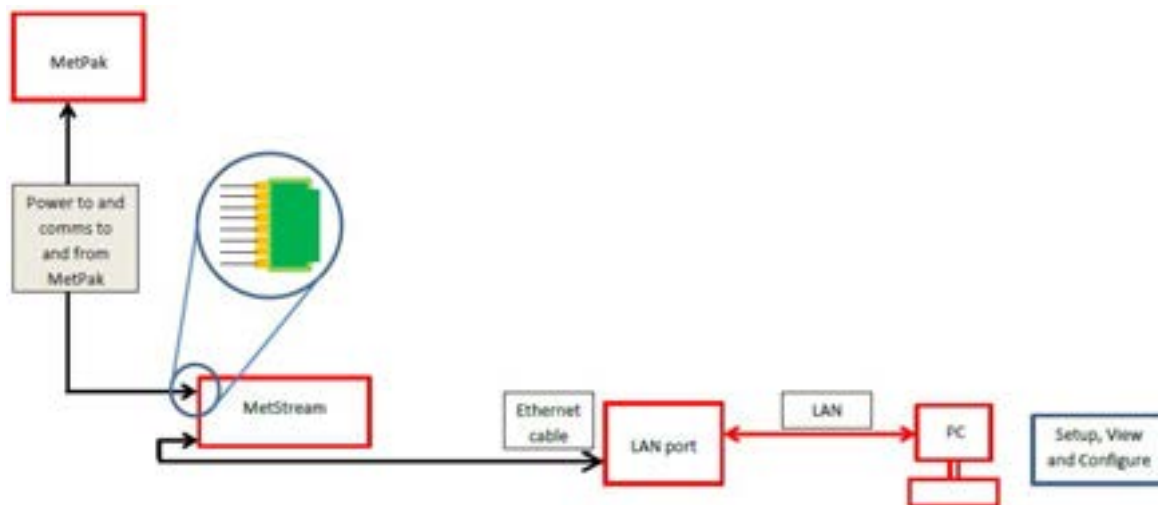


First connect MetStream to a LAN connection using the 2 metre Ethernet Cable supplied or any standard non crossover Ethernet cable.

Now apply power to the MetStream 105, wait for 90 seconds before attempting to access it for data.

Open Gill MScan Software load and Open Gill MScan Software on to the PC from the supplied CD.

Select 'MetStream Connected to Network'.


Click on the 'Find MetStream' button.

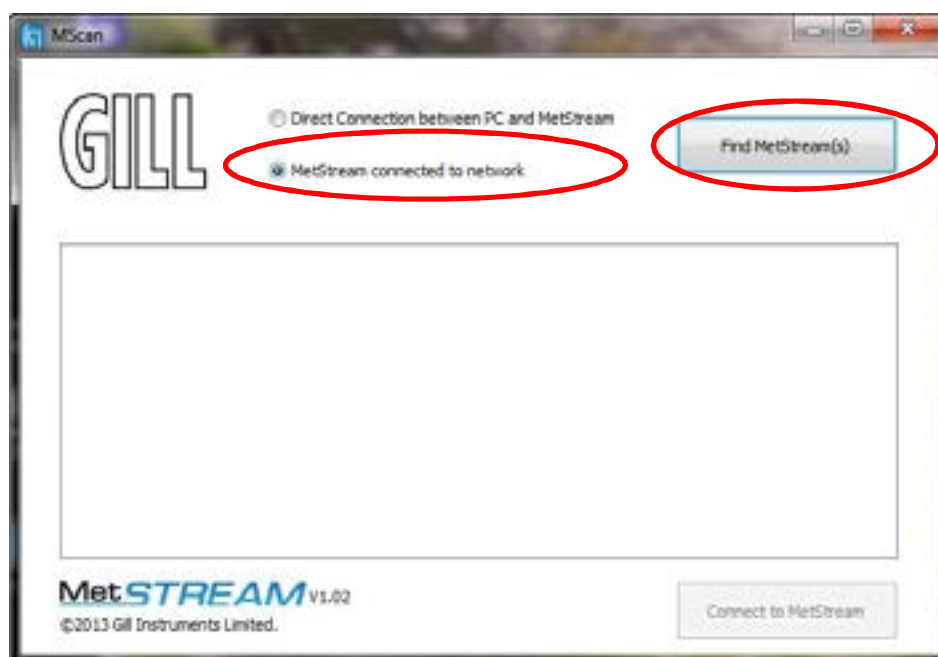

A list of available MetStreams will be listed with their IP addresses.

Click on and highlight the MetStream found at IP address that you want to connect to.

Click on 'Connect to MetStream'.

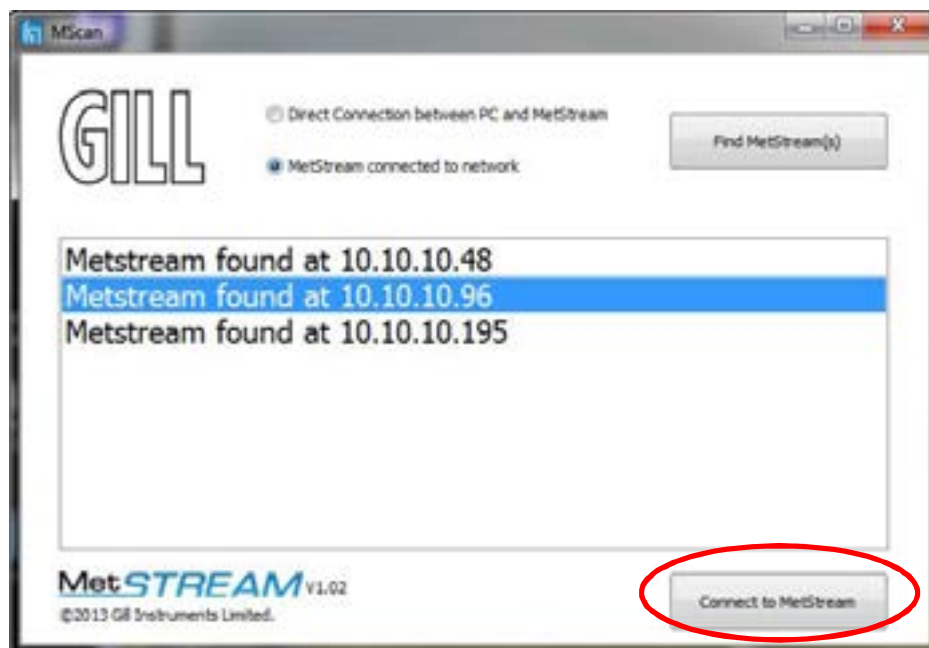


Your default browser will be launched and will connect to the MetStream homepage

If the opening MetPak screen does not appear to reflect the currently connected equipment then clear the Browser Cache and refresh the display.

In Chrome the cache can be cleared by selecting 'Customise and control Google Chrome/History/Clear browsing history'. Then select only 'Empty the cache'.


Now Configure or retrieve MetStream data as per Para 6.5.

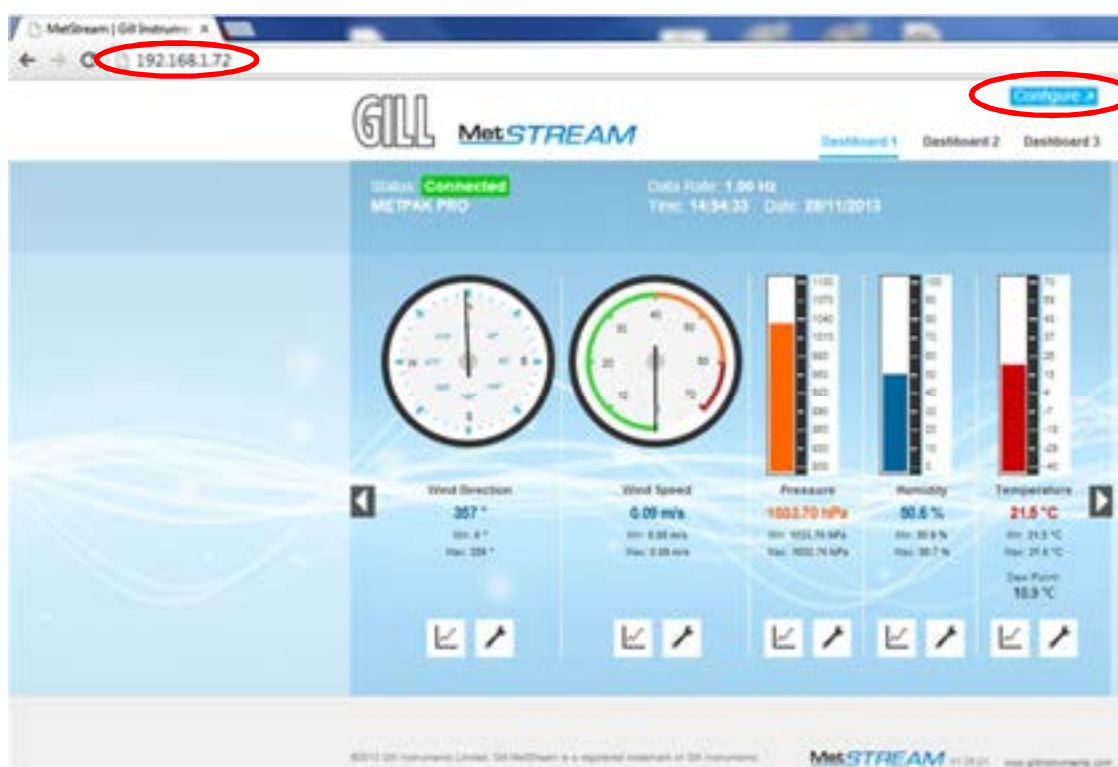

6.3 Accessing the MetStream GUI with a PC and a Wi-Fi Router

6.3.1 Using an Ethernet cable connection between MetStream 105 and a Wi-Fi Router.

Note:- Alternative Wi-Fi connected devices may be used to connect to the MetStream unit to view the GUI if required e.g. Tablet or Smart Phone however the Gill MScan Software will only run on a PC to determine the IP address. Alternative IP Scan app software can be used.

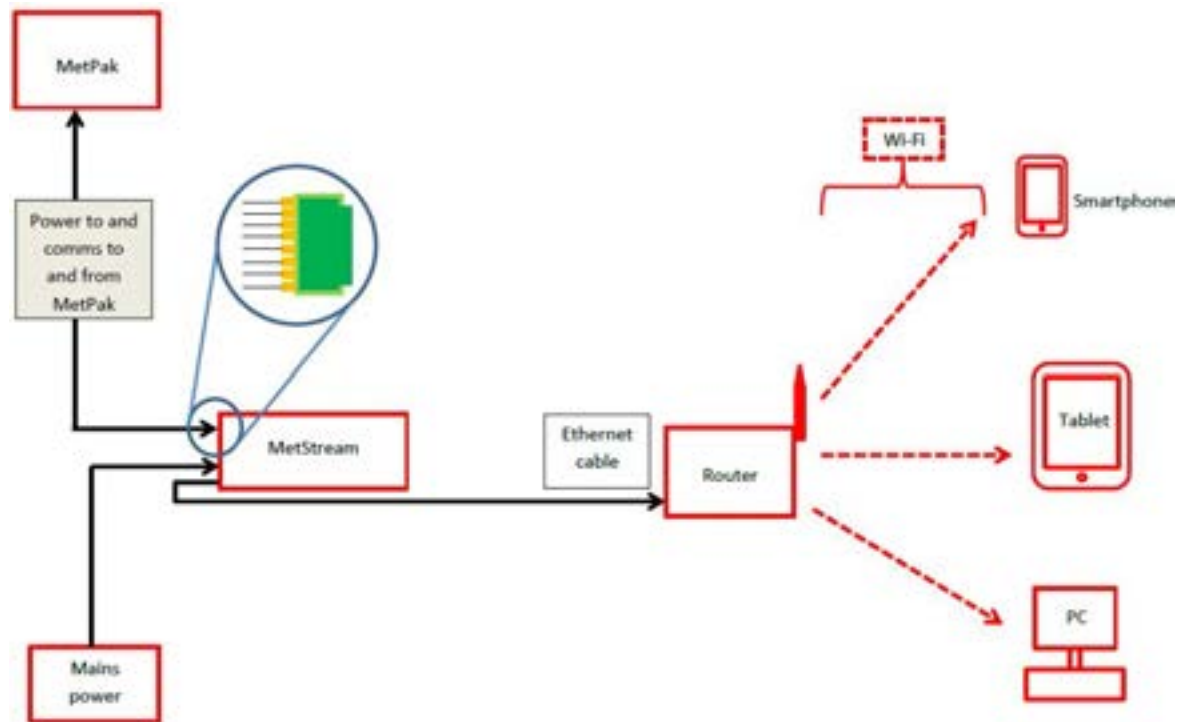

Connect MetStream to a Wi-Fi Router using the 2 metre Ethernet Cable supplied or any standard non crossover Ethernet cable.

Now apply power to the MetStream 105, wait for 90 seconds before attempting to access it for data.

If not already connected to the Wi Fi Router on the PC select:-

Start/

Select/

Control Panel/


Network and Sharing Center/

Select the appropriate Wi Fi Network and log on to the Wi Fi Network (the Wi Fi password may be needed).

Once connected to the Wi Fi network load and open Gill MScan Software on to the PC (MScan Software is on the supplied CD).

Select 'MetStream Connected to Network'.

Click on the 'Find MetStream' button.

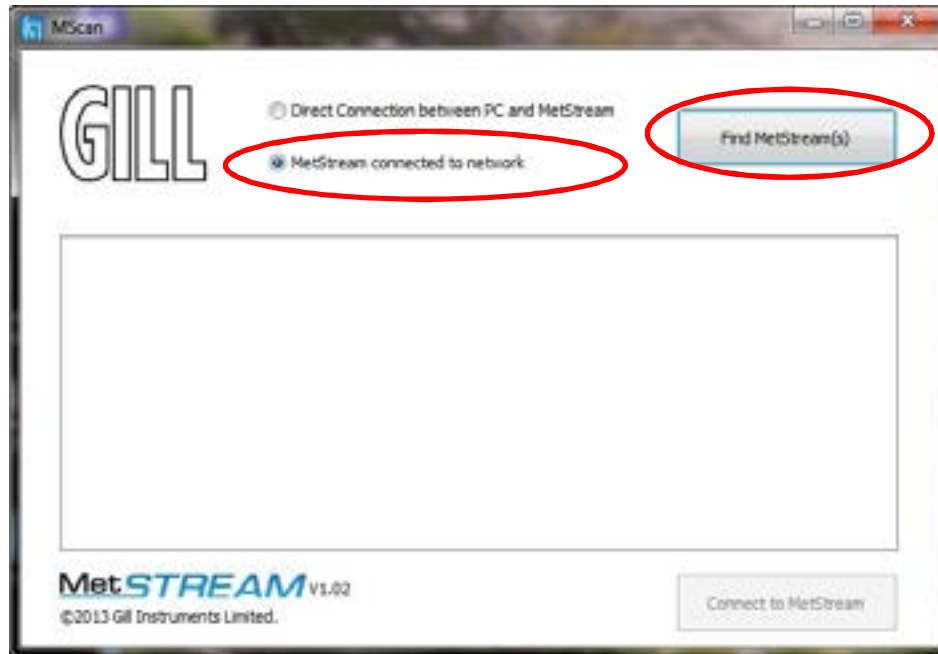


A list of available MetStreams will be listed with their IP addresses.

Click on the appropriate 'MetStream found at xxxxx' IP address to highlight the one to connect to.

Click on 'Connect to MetStream'.

Your default browser will be launched and will connect to the MetStream homepage.

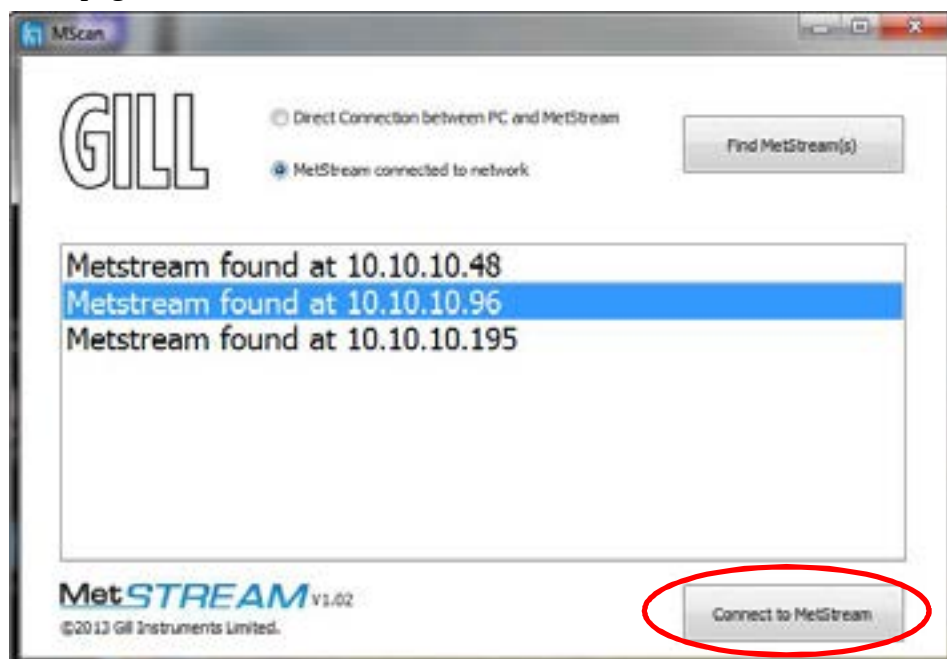

NOTE the MetStream IP address is allocated by the Wi Fi Router and can change each time MetStream is powered up if the MetStream unit is set for DHCP. Use Configure to fix the IP Address of MetStream if required.


If the opening MetPak screen does not appear to reflect the currently connected equipment then clear the Browser Cache and refresh the display.

In Chrome the cache can be cleared by selecting 'Customise and control Google Chrome/History/Clear browsing history'. Then select only 'Empty the cache'.

Now Configure or retrieve MetStream data as per Para 6.5.



6.3.2 Using a Wi-Fi connection between MetStream 105 and a Wi-Fi Router.

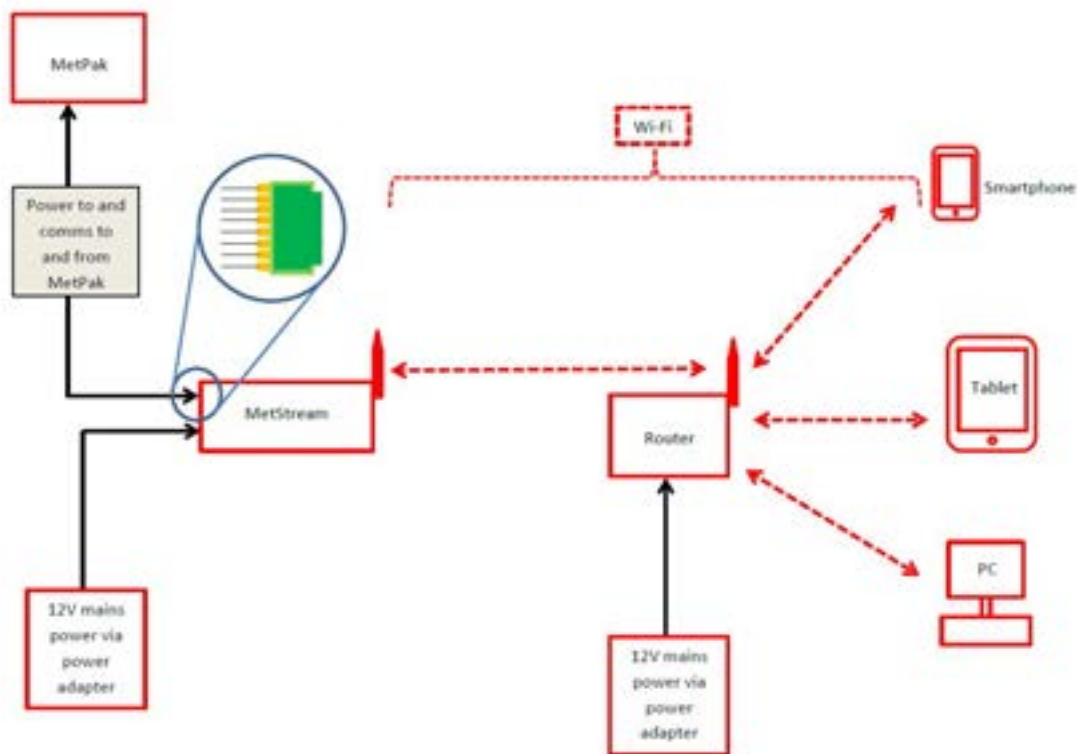


Before the Wi-Fi on a MetStream can be used, it needs to be set up. This means that the MetStream needs to be connected to either the PC or the router via a wired connection as per Para 6.1.1, 6.2, or 6.3.1.

Once the MetStreams' IP address has been obtained, open Firefox or Chrome and type the IP address into the browsers address bar (A):
The MetStream GUI will load and be displayed in the browser. Now click configure (B).




The following window will now appear:

Enter username (admin) and password (password) and click login.

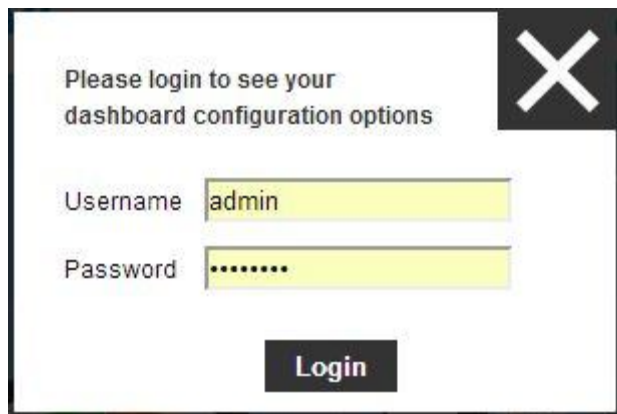A login window titled "Please login to see your dashboard configuration options" with a close button (X) in the top right corner. It contains two input fields: "Username" with the text "admin" and "Password" with masked characters ".....". Below the fields is a "Login" button.

The configuration screen will now be displayed:

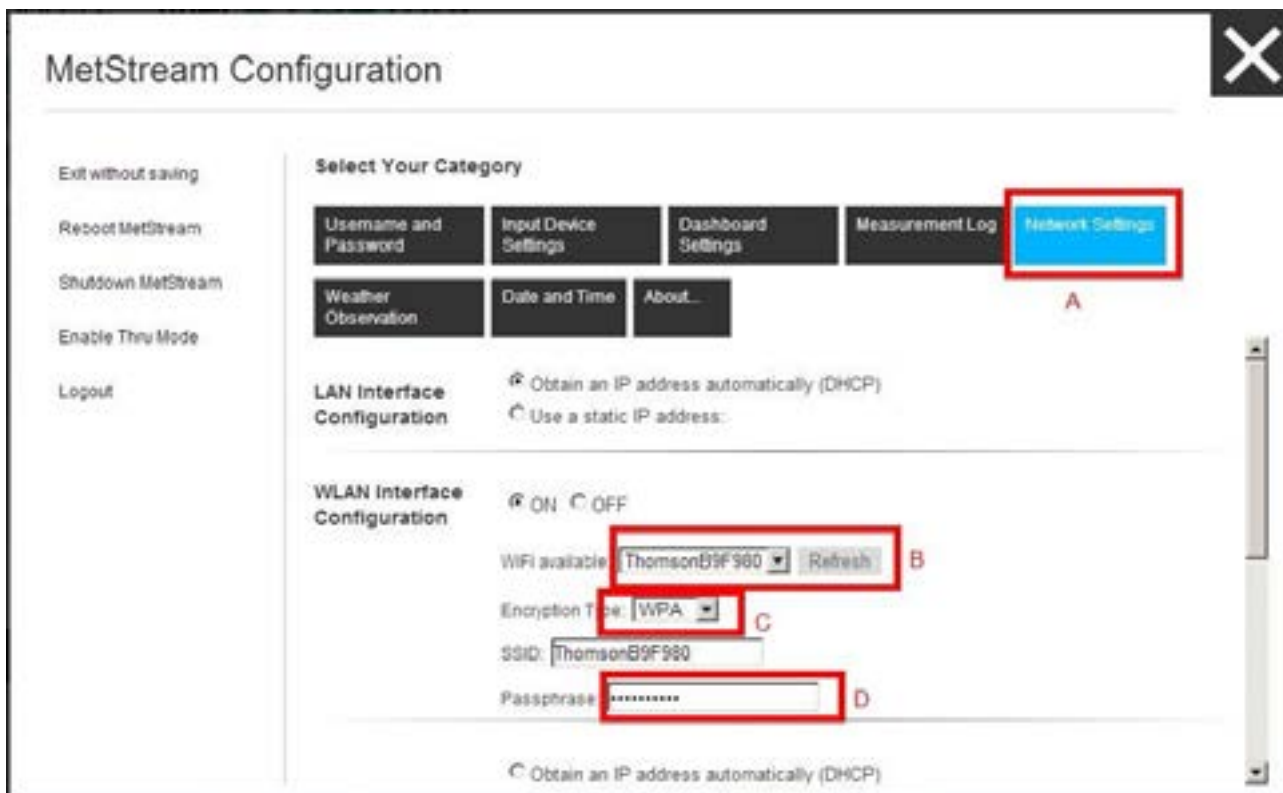The MetStream Configuration screen. On the left is a sidebar with links: "Exit without saving", "Reboot MetStream", "Shutdown MetStream", "Enable Thru Mode", and "Logout". The main area is titled "MetStream Configuration" and has a close button (X) in the top right. Below the title is a "Select Your Category" section with buttons: "Username and Password", "Input Device Settings", "Dashboard Settings", "Measurement Log", "Network Settings" (highlighted with a red box and labeled 'A'), "Weather Observation", "Date and Time", and "About...". Below this are two sections: "LAN Interface Configuration" with radio buttons for "Obtain an IP address automatically (DHCP)" (selected) and "Use a static IP address:", and "WLAN Interface Configuration" with radio buttons for "ON" (selected) and "OFF". Under "WLAN Interface Configuration", there are four items highlighted with red boxes: "WiFi available" with a dropdown menu showing "ThomsonB9F980" and a "Refresh" button (labeled 'B'), "Encryption Type" with a dropdown menu showing "WPA" (labeled 'C'), "SSID" with a text box showing "ThomsonB9F980", and "Passphrase" with a masked text box (labeled 'D'). At the bottom of the WLAN section is a radio button for "Obtain an IP address automatically (DHCP)".

Clicking network settings (A) will bring up the above options window. Clicking refresh will ensure that all Wi-Fi networks in range will be selectable. Choose the network that you wish to log onto from the drop-down menu (this will auto-populate the SSID box).

Choose the encryption type (C) to match that of the detected Router (WPA/WEP/NONE) and enter the passphrase (D).

It is possible to set the MetStream so that it obtains it's IP address automatically from the router (DHCP) or the IP address can be determined and set by the user (static IP).

WLAN Interface Configuration

☒ ON ☐ OFF

WiFi available: ThomsonB9F900 Refresh

Encryption Type: WPA

SSID: ThomsonB9F900

Passphrase:

☐ Obtain an IP address automatically (DHCP) A

☒ Use a static IP address: B

IP address: 192.168.1.105 C

Subnet mask: 255.255.255.0 D

To automatically assign an IP address, check option A. To set a static IP address, check option B. Option B requires the user to know what the routers subnet identity is and assign an IP address accordingly (e.g. if the routers address is 192.168.1.1, then you may use address 192.168.1.105 in box (C), as long as this does not conflict with another client connected to the router). The subnet mask (D) value will again depend upon the router but this value is more often than not able to be left at 255.255.255.0. The default gateway (E) should be set to the routers IP address.

☒ Use a static IP address:

IP address: 192.168.1.105

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.254 E

DNS: 8.8.8.8 8.8.4.4

Thru Mode TCP Port: 8023

Hostname Hostname: Test

Save Settings F

Once the MetStream has been set-up according to the user's wishes, click save settings (F).

The following screen will now be displayed:

The page at 192.168.67.67 says:


Do you want to reboot MetStream for the changes to take effect?
(Take approximately 1 minute)

OK Cancel

Click 'OK' and the following screen will be displayed whilst the MetStream reboots:




Once the MetStream has rebooted, it will still be observable on the same browser window as it will still be connected to the PC via LAN, crossover cable or router. If a static IP address has been set, the user can check that the Wi-Fi IP address is valid by entering that address into the address bar of a new browser window. If the MetStream is configured for DHCP the IP address can be found under “About” in the configure window.

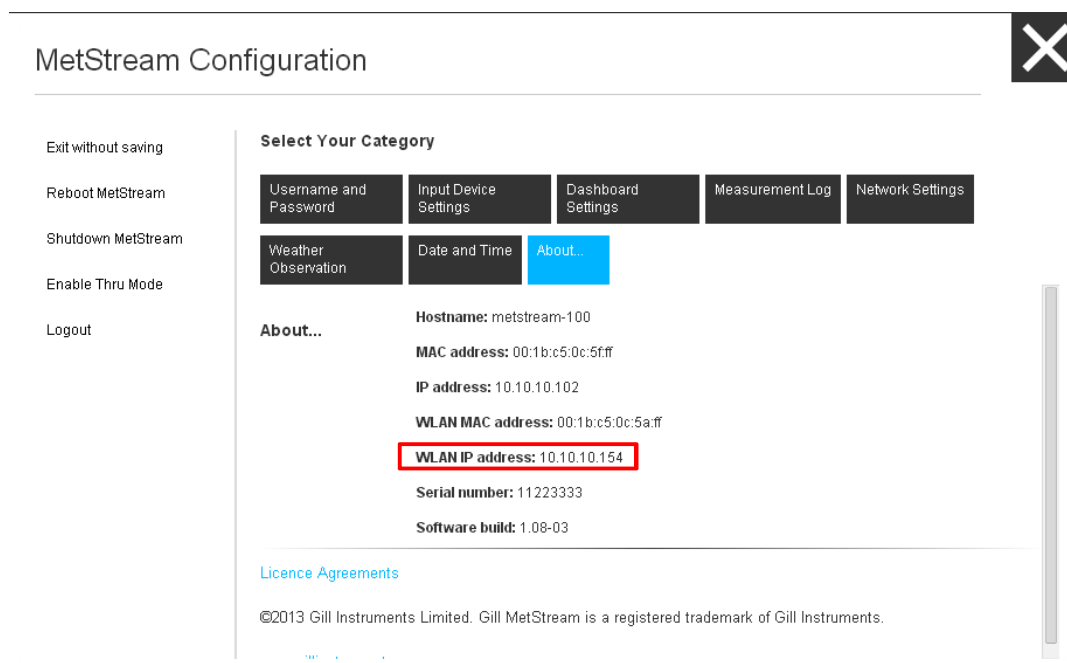

Alternatively the IP address can be found using the MScan Software (MScan Software is on the supplied CD).

Select 'MetStream Connected to Network'.

Click on the 'Find MetStream' button.

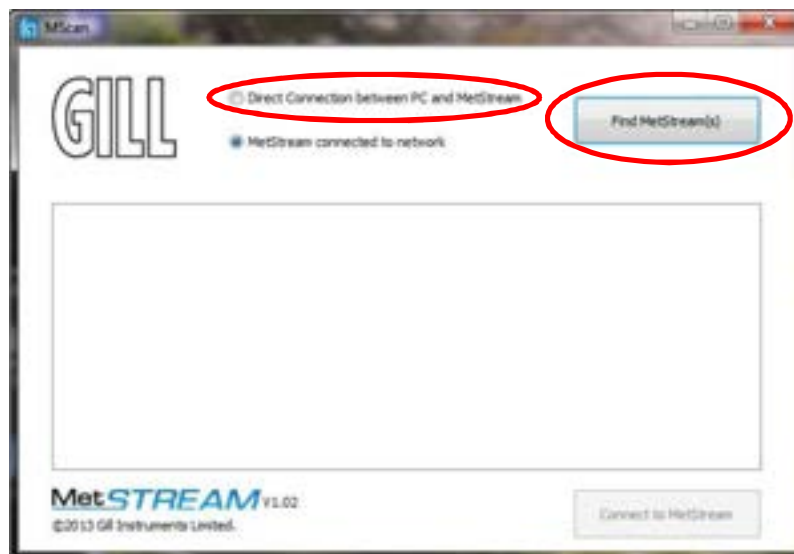


A list of available MetStreams will be listed with their IP addresses.

Click on the appropriate 'MetStream found at xxxxx' IP address to highlight the one to connect to.

Click on 'Connect to MetStream'.

Your default browser will be launched and will connect to the MetStream homepage.

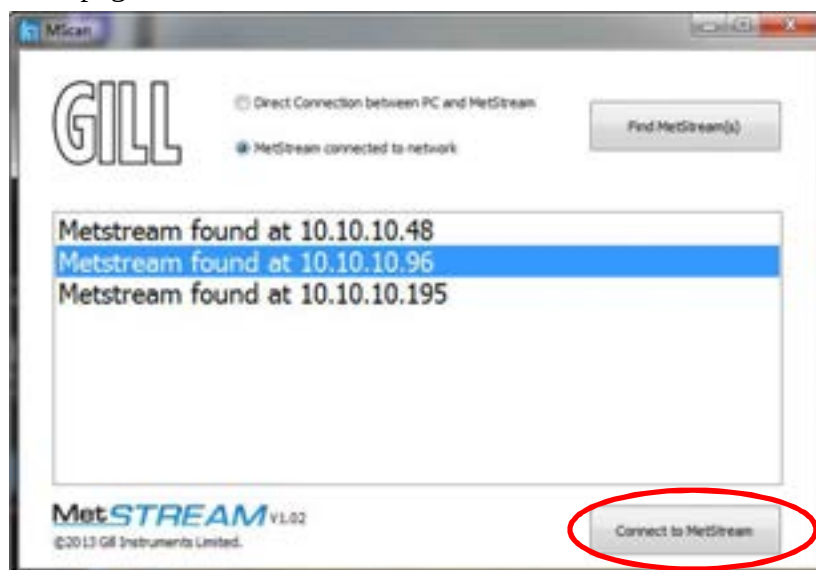


The MetStream can now be unplugged from the LAN connection to the router (there may be a 'glitch' in the Wi-Fi connection as the LAN connection is unplugged but the MetStream will recover).

6.4 MetStream Front Page GUI Features.

Once a Web Browser connection has been established then it is possible to view the MetPak/connected instrument data.

Open Browser Window

Type in the IP address e.g. 192.168.1.67 and Enter




MetStream will communicate with the attached RS232/422/485 connected device, read settings, log data automatically and display data in a graphical format.

In this case a Gill MetPak Pro is connected to the MetStream device and the Graphical User Interface (GUI) opens with the following display.

Dashboards

MetPak Pro parameters open on Dashboard 1, to display further MetPak Pro instruments click on Dashboards 2 and 3.

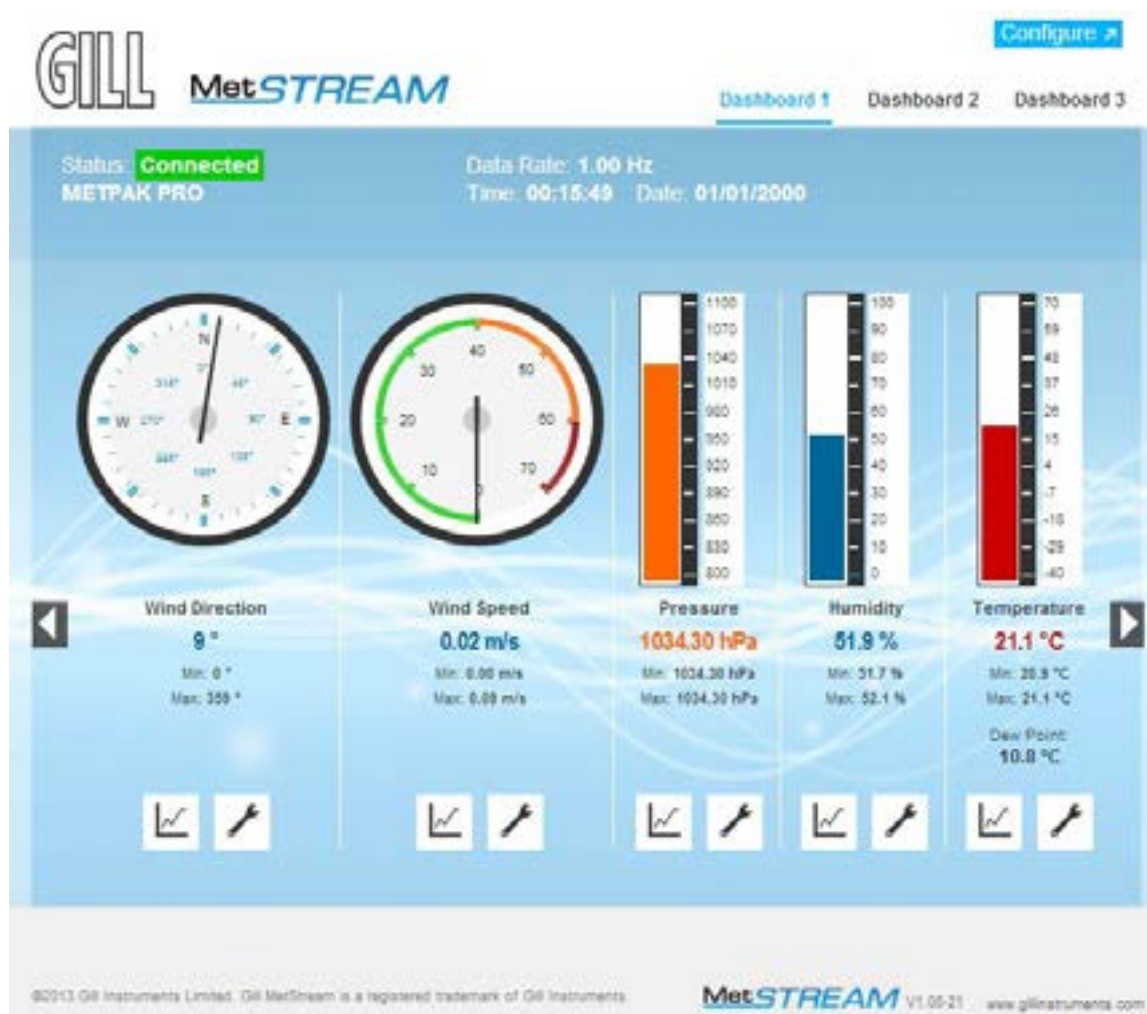

Dashboard 2 instrument display shown as follows:-



Dashboard 3 instrument display shown as follows:-



Where applicable at the bottom of the MetStream parameter display there are 2 tool signs.



Trend Graphs


Click on the Trend Graph



icon to open a trend graph of the parameter of interest.

E.g. Wind Direction.

Select a trend period value as required.

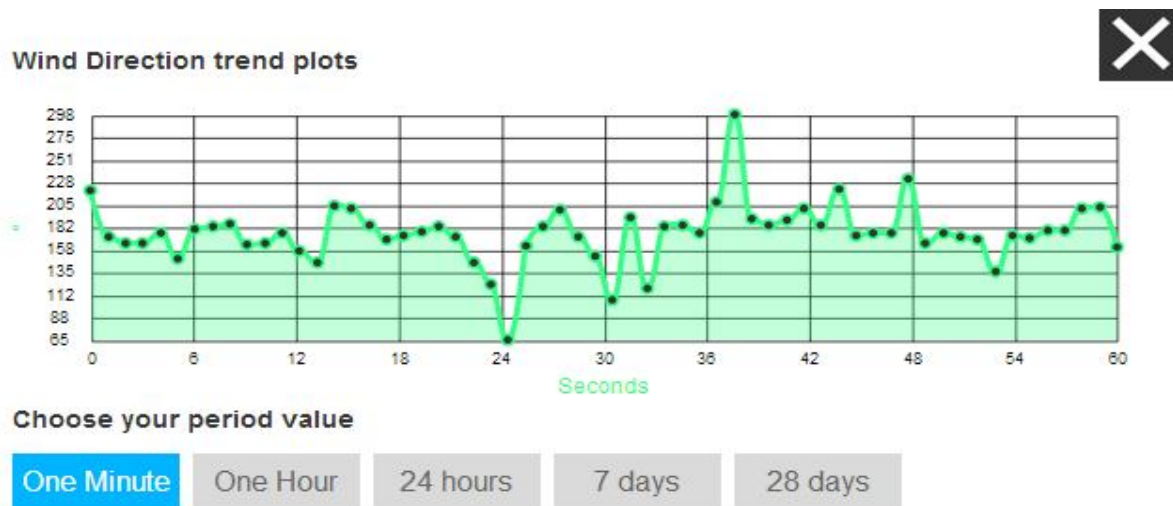

Trend Graph Period Sampling.


- One Minute screen - a reading is taken every second.
- One Hour Screen - a reading is taken once every minute.
- 24 hours screen - a reading is taken once every 30 minutes.
- 7 days - a reading is taken once every 3 hours (00:00, 03:00, 06:00 etc.).
- 28 days - a reading is taken once every 3 hours (00:00, 03:00, 06:00 etc.).

Trend plots are built from the logged data stored in the MetStream. On power up, it may take several minutes for all of the plots to be populated from the stored data.

Change Reading Type and Reset Max/Min.

Click on the  icon.

Select Wind Direction Dial style or reset max or min or any as required, click on Save Settings.

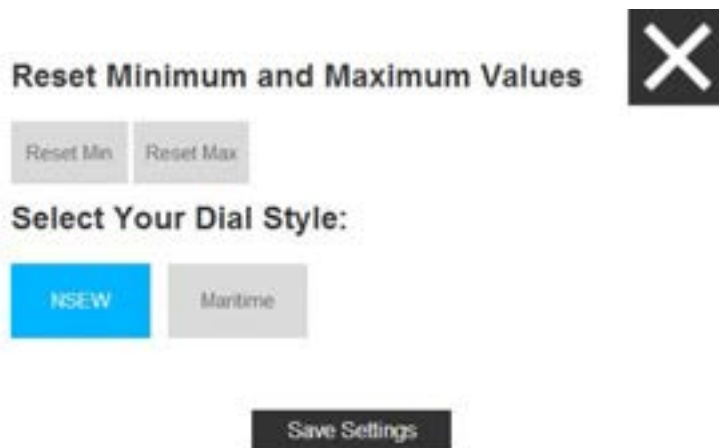

NOTES:

‘Save settings’ only saves settings for the period that the browser window is open. If the browser window is refreshed or PC re-started then the display will revert to the default screen settings on first opening MetStream.

Browser Window saved settings are only applicable to the PC on which MetStream is viewed.

Saved Settings do not change the MetStream unit configuration.

If Global use PC browser settings need to be changed then use MetStream Configure (password protected) to make changes to MetStream.

6.5 MetStream Configuration (Administrator Use)

Access to the Configure pages is dependent on having username and password access.

Click on the Configure  icon at the top of the main screen.

6.5.1 Login

Enter Username and Password.

(MetStream units are shipped with a default username and password as follows).

Username: admin (default, note all lowercase letters).

Password: password (default, note all lower case letters).

Click on Login.

Please login to see your
dashboard configuration options



Username

Password

Login

This will bring you to the opening MetStream Configuration screen.

MetStream Configuration



Exit without saving

Reboot MetStream

Shutdown MetStream

Enable Thru Mode

Logout

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Connection Type ☒ Auto ☐ Manual

Supported devices

- MetPak Pro PV3
- MetPak Pro (heated) PV3
- MetPak Pro UVW PV3
- MetPak RG PV3
- MetPak RG (heated) PV3
- MetPak RG UVW PV3
- MetPak PV3
- MetPak (heated) PV3
- MetPak UVW PV3

6.5.2 Exit/Reboot/Shutdown/Thru Mode/Logout

On the left hand side of the Configuration screen there are five buttons:-

Exit without saving

Reboot MetStream

Shutdown MetStream

Enable Thru Mode

Logout

Exit without saving (and ) – Go back to GUI front screen without changing settings but will still be logged into configure screen. If you then click on Configure you will be taken to the Configure tabs without having to login again.

Reboot MetStream – An electrical power down of MetStream that will need a refresh of the Web browser screen.

Shutdown MetStream – Turns off power inside the MetStream box. This will require MetStream to be powered up to view the web GUI again.

WARNING: This command will require the physical removal of the power from the MetStream and the reapplication of power. MetStream cannot be restarted remotely once this command has been issued.

Enable Thru Mode – A mode to allow other software (e.g. a Terminal Programme) to access the connected instrument to view or change its settings (see Para 6.5.11).

Logout – Go back to the GUI screen this time if accessing Configure then a new login will be required.

6.5.3 Username and Password


If it is required to change the default Username and Password then select this page as follows:-

To change the Password complete the fields identified below and click on Submit.




The screenshot shows the 'MetStream Configuration' interface. On the left is a sidebar with options: 'Exit without saving', 'Reboot MetStream', 'Shutdown MetStream', 'Enable Thru Mode', and 'Logout'. The main area has a 'Select Your Category' section with buttons for 'Username and Password' (highlighted), 'Input Device Settings', 'Dashboard Settings', 'Measurement Log', 'Network Settings', 'Weather Observation', 'Date and Time', and 'About...'. Below this, the 'Username or Password' section contains a dropdown menu set to 'Password'. The form fields are: 'Current Username' (displaying 'admin'), 'Current Password' (empty), 'New Password' (empty), and 'Confirm New Password' (empty). A 'Submit' button is at the bottom right.

Click on OK as below and this takes you back to the Main Dashboard screen to log in with the new Password.

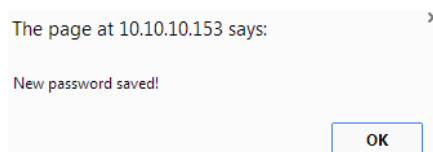

To change the Username select this option from the Username or Password dropdown menu.

Complete the New Username fields identified below and click on Submit.

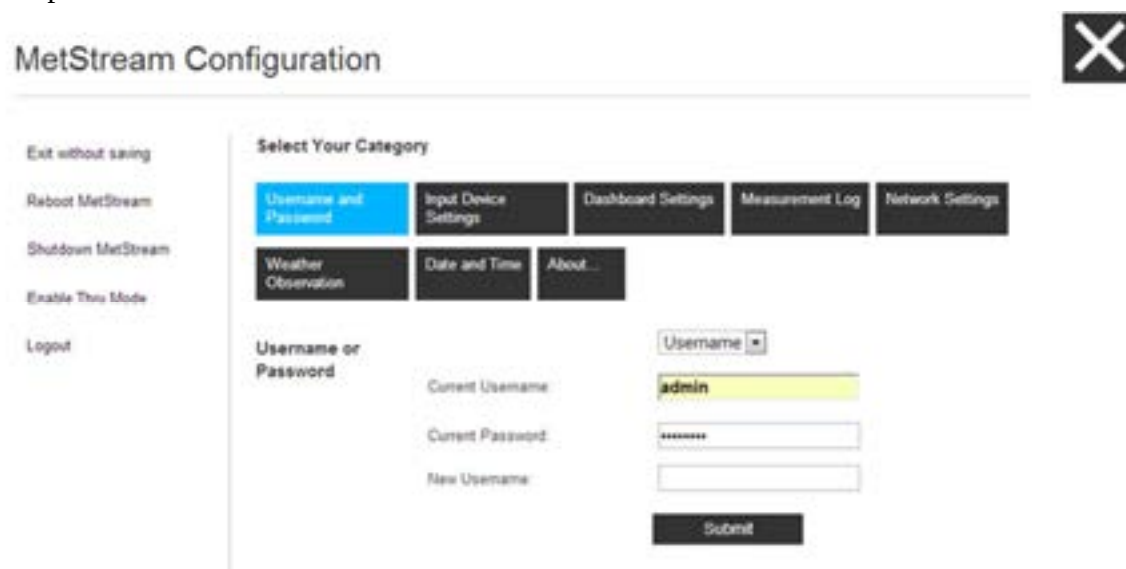

The screenshot shows the 'MetStream Configuration' interface, similar to the previous one. The 'Select Your Category' section has 'Username and Password' highlighted. In the 'Username or Password' section, the dropdown menu is now set to 'Username'. The form fields are: 'Current Username' (displaying 'admin'), 'Current Password' (displaying '*****'), and 'New Username' (empty). A 'Submit' button is at the bottom right.

Note you cannot change password and user name at the same time. They must be done separately.

6.5.4 Date and Time

When MetStream is first powered up it opens with a default Time Zone, default 01/01/2000 date and zero hour time.

Select the required Time Zone from the drop down menu and click on 'Save Time Zone'. Type in the required Time and Date into the relevant boxes and click on 'Save Time & Date'.

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Time Zone Time zone:

Time And Date Time: Date:

Default 'Change Time Source' setting is NTP (see Notes below).

Time Source Manual ☐ Enable

 NTP ☒ Enable

 PTP ☐ Enable

If PTP enabled (see Notes below) the screen will show:-

Time Source Manual ☐ Enable

 NTP ☐ Enable

 PTP ☒ Enable

 PTP options:

Notes:

Manual Time, for non-networked units, relies on MetStream internal clock.

Network Time Protocol (NTP) recommended setting for network connected PC's which can obtain time synchronisation over the internet.

Precision Time Protocol (PTP) looks for the network provider master clock for specific closed networks.

PTP options data will show the IP address of the PTP source.

6.5.5 Dashboard Settings (Administrator Use)

Note: Changing Dashboard Settings affects the MetStream data view seen by all PC's using the same MetStream Web browser IP address.

Choose appropriate front GUI dashboard settings as required (MetPak connected equipment settings illustrated).

Default Measurement Ranges units relate to all instrument measurements that are shown with a gauge and digital reading rather than just a digital reading on the front GUI screen.

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Default Units

Wind Speed:	MS	Pressure:	HPA	Temperature:	C	Dewpoint:	C
PRT:	C	Total Rainfall (DIG1):	MM				

Default Measurement Ranges

Wind Speed:	0 70	Pressure:	800 1100	Humidity:	0 100
Temperature:	-40 70	PRT:	-40 70	Check:	

Background


Select a Background Image:

Dashboard title

Save Settings

Click on Save Settings when changes have been made and a warning screen will be shown. Click on OK.

After approximately 1 minute close the GUI and re-open the GUI to view new changes (this is not an automatic process).

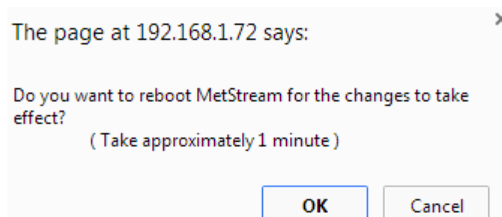

6.5.6 Data Logging

Logging Notes:

MetStream logs data to an internal SD card (not user removable).

Data logging occurs continuously once MetStream is connected to a recognised/configured external instrument; in this case data logging cannot be disabled.

If no unit (e.g. MetPak) is connected to the MetStream then no data is logged.


MetStream logs data at the output rate of the connected instrument (up to 20Hz).

MetStream creates daily log files up to a maximum of 29 after which the oldest dated folder is deleted.

Logged data can be downloaded to a PC or to a USB flash drive connected to MetStream.

Saving Logged Data to a PC Download Location

Select the Measurement Log Tab.

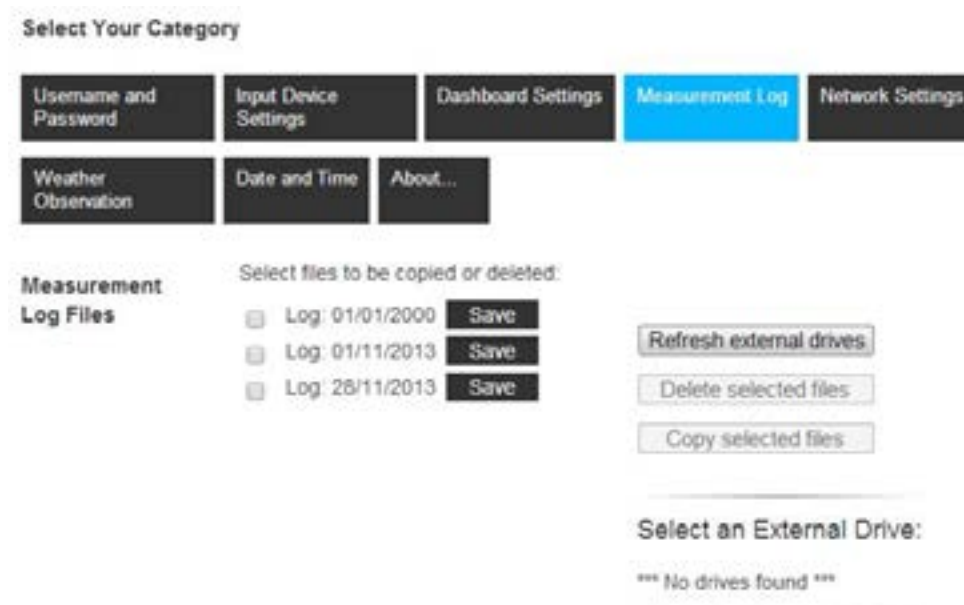

If for instance you had selected the box of Log: 28/11/2013 and Clicked on **Save** this would save an MSLOG_20131118.csv file to the PC Downloads Folder.

(E.g. Start/Documents/Downloads (MSLOG_Year/Month/Day.csv file).

This file can automatically open in a spreadsheet format if for instance Microsoft Excel or Libre Office Calc are installed on the PC as per the following example. Otherwise the data can be opened as a Comma Separated text file.

Sequence	Date	Time	Start Time	User Node	Wind Spd	Wind Dir	Wind Dir_u	Wind Dir_v	Wind Dir_w	Wind Dir_x	Wind Dir_y	Wind Dir_z	Wind Dir_u	Wind Dir_v	Wind Dir_w	Wind Dir_x	Wind Dir_y	Wind Dir_z	Pressure	Humidity	Humid
1	2013-11-18	08:30:21	08:30:21	2090 Q	0.01 MS	112 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
2	2013-11-18	08:30:22	08:30:22	2090 Q	0.01 MS	204 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
3	2013-11-18	08:30:23	08:30:23	2090 Q	0.01 MS	58 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
4	2013-11-18	08:30:24	08:30:24	2187 Q	0.02 MS	179 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
5	2013-11-18	08:30:25	08:30:25	2139 Q	0.01 MS	34 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
6	2013-11-18	08:30:26	08:30:26	2123 Q	0.01 MS	25 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
7	2013-11-18	08:30:27	08:30:27	2118 Q	0.01 MS	6 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
8	2013-11-18	08:30:28	08:30:28	2120 Q	0.01 MS	7 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
9	2013-11-18	08:30:29	08:30:29	2098 Q	0.01 MS	283 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
10	2013-11-18	08:30:30	08:30:30	2723 Q	0.01 MS	24 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %
11	2013-11-18	08:30:31	08:30:31	2574 Q	0.01 MS	176 DEG	0	0	0	0	0	0	0	0	0	0	0	0	1013 HPA	51.5 %	51.5 %

Saving Data to a USB Flash Drive

Data logged and saved to the internal SD card can be manually copied to an external USB flash drive. Data is not automatically or directly sent to the USB flash drive.

MetStream will support USB flash drives up to 32GB.

If no external flash drive has been connected to MetStream then this will be reported (No Drives Found).

If a USB flash drive has been inserted then when the MetStream Measurement Log screen is reached an external drive will be recognised e.g. Kingston.

When connecting a USB drive to MetStream after power up then open the Measurement Log screen and click on 'Refresh external drives'.

Note: When MetStream is first switched on the day/month/year defaults to 01/01/2000 until Date and Time are configured. The log file created for this date can be deleted if required.

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Measurement Log Files

Select files to be copied or deleted:

☐ Log: 01/01/2000	Save
☐ Log: 01/11/2013	Save
☐ Log: 28/11/2013	Save

Refresh external drives

Delete selected files

Copy selected files

Select an External Drive:

KINGSTON ☐

Click on the external drive tick box (e.g. KINGSTON) to enable copying of files (highlights selected files options).

Click on Log or Logs to be saved (e.g. Log 01/11/2013).

Measurement Log Files

Select files to be copied or deleted:

☐ Log: 01/01/2000	Save
☒ Log: 01/11/2013	Save
☐ Log: 28/11/2013	Save

Refresh external drives


Delete selected files

Copy selected files


Select an External Drive:

KINGSTON ☒

Click on Ok

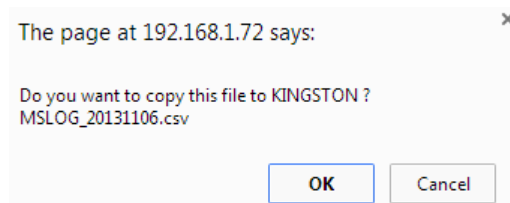

After 5-10 seconds MetStream will report.

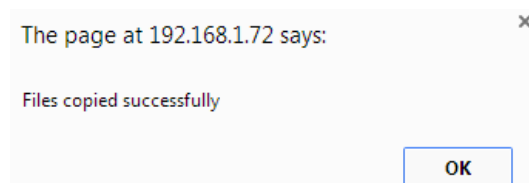

Data is saved on the USB flash drive as a .CSV file identified as for example by MSLOG_20131101 (Year 2013/Month11/Day01).

This file can automatically open in a spreadsheet format if for instance Microsoft Excel or Libre Office Calc are installed on the PC as per the following example.

6.5.7 Input Device Settings

When Input Device Settings is selected Connection Type will show Auto as the default setting.

Auto

The Auto selection (default setting) allows MetStream to automatically detect any of the instruments detailed in the Supported Devices list and log the data string data that they are outputting.

The screenshot shows the 'Input Device Settings' screen. At the top, there's a header 'Select Your Category' with a row of buttons: 'Username and Password', 'Input Device Settings' (highlighted in blue), 'Dashboard Settings', 'Measurement Log', and 'Network Settings'. Below this is another row: 'Weather Observation', 'Date and Time', and 'About ...'. Underneath these is the 'Connection Type' section with two radio buttons: 'Auto' (selected) and 'Manual'. A horizontal line separates this from the 'Supported devices' section. This section contains a list of 15 device models, each preceded by a square bullet point. At the bottom of the list is a dark button labeled 'Switch to auto'.

Select Your Category

Username and Password Input Device Settings Dashboard Settings Measurement Log Network Settings

Weather Observation Date and Time About ...

Connection Type ☒ Auto ☐ Manual

Supported devices

- MetPak Pro PV3
- MetPak Pro (heated) PV3
- MetPak Pro UVW PV3
- MetPak RG PV3
- MetPak RG (heated) PV3
- MetPak RG UVW PV3
- MetPak PV3
- MetPak (heated) PV3
- MetPak UVW PV3
- MetPak (heated) PV3
- MetPak UVW PV3
- MetPak Pro PV2
- MetPak PV2

Switch to auto

Manual Mode

MetPak Equipment

If Manual setting is selected then if the connected device settings can be read they will be shown as per the following example with a connected MetPak Pro.

If a device needs to be connected that is not on the supported list please contact Gill Instruments for advice.

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Connection Type ☐ Auto ☒ Manual

Device Device name: METPAK PRO

Baud Rate Select a baud rate: 19200 ▾
Parity: none ▾
Stop: 1 bit ▾

Interface Select an interface: RS232 ▾

Output Mode ☒ Continuous Mode ☐ Polled mode

ASCII Setup Message Start Character: 0x02
Message End Character: 0x0d
Message Delimiter: comma ▾

Number of Parameters Select a number of parameters: 14 ▾

Parameters Reported

Field 1 Node ▾ - ▾	Field 2 Wind Direction ▾ DEG ▾	Field 3 Wind Speed ▾ MS ▾	Field 4 Pressure ▾ HPA ▾
Field 5 Humidity ▾ % ▾	Field 6 Temperature ▾ C ▾	Field 7 Dewpoint ▾ C ▾	Field 8 PRT ▾ C ▾
Field 9 Custom 1 (AN) ▾ - ▾	Field 10 Custom 2 (AN) ▾ - ▾	Field 11 Custom 3 (DI) ▾ - ▾	Field 12 Voltage ▾ V ▾
Field 13 Status ▾ - ▾	Field 14 Check ▾ - ▾		

Custom Settings 1 (for Analogue input 1)

Sensor Type: Solar ▾ Alias: Select Units: WM2 ▾

Custom Settings 2 (for Analogue input 2)

Sensor Type: Other... ▾ Alias: Custom Unit: IN

Custom Settings 3 (for Digital input 1)

Sensor Type: Total Rainfall ▾ Alias: Select Units: MM ▾

Save Settings

6.5.8 Network Settings

Automatic IP address (DHCP)

The default Network setting is to obtain an IP address automatically using a Dynamic Host Configuration Protocol (DHCP). Thus the MetStream IP address will be allocated to it when connected to a Wi Fi Router or LAN Server.

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

LAN Interface Configuration

- ☒ Obtain an IP address automatically (DHCP)
☐ Use a static IP address:

WLAN Interface Configuration

☐ ON ☒ OFF

Thru Mode

TCP Port

Hostname

Hostname

Save Settings

Static IP Address

If a Static IP address is required for the MetStream connection then click on Use a Static IP address and complete the form.

When connecting MetStream in a system that has no DNS or DHCP server, it may be necessary to set up a static IP address (see Para 6.1.2 to determine the IP address).

LAN Interface Configuration

- ☐ Obtain an IP address automatically (DHCP)
☒ Use a static IP address:

IP address:

Subnet mask:

Default gateway:

DNS:

WLAN Interface

The Wireless LAN Interface Configuration connection is only applicable to MetStream 105.

**WLAN Interface
Configuration** ☐ ON ☒ OFF

Ensure selected to ON for Wi-Fi Operation (default setting is OFF).

Refer to section 6.3.2 for Wi-Fi configuration instructions.

6.5.9 Weather Observation Website (WOW)

Applies to MetStream units that are connected to a device that has internet access.

The UK Meteorological Office have created a platform for collecting weather observation readings primarily from across the United Kingdom see <http://wow.metoffice.gov.uk/> (other countries have contributed data).

This can include data from instruments that are connected to MetStream that provide weather type data (e.g. the MetPak range). General details on WOW can be read at:- <http://wow.metoffice.gov.uk/support/general>

To register for sending data to the UK Met Office WOW site see the attached link:- <https://register.metoffice.gov.uk/WaveRegistrationClient/public/register.do?service=weatherobservations>

To send data to the Met Office site when an account has been set up, select the MetStream Weather Observation page.

Under Weather Observation Website:-

- Click on Enabled.
- Complete Site ID, Pin and Site Update Rate information.
- Click on Save Settings.

Data collected by MetStream will be sent automatically providing an internet link is established with the MetStream unit. The time interval for sending this data can be selected by the user

Select Your Category

Username and Password	Input Device Settings	Dashboard Settings	Measurement Log	Network Settings
Weather Observation	Date and Time	About...		

Weather Observation Website

☒ Enabled ☐ Disabled

Site ID:

Pin:

Site Update Rate (minutes):

Save Settings

6.5.10 About

Reports various MetStream attributes that can be useful for record of unit build and fault finding.

Select Your Category

Username and Password

Input Device Settings

Dashboard Settings

Measurement Log

Network Settings

Weather Observation

Date and Time

About...

About...

Hostname: metstream-100

MAC address: 00:1b:c5:0c:50:2a

IP address:

WLAN MAC address:

WLAN IP address:

Serial number: 13510008

Software build: 1.08-03

[Licence Agreements](#)

©2013 Gill Instruments Limited. Gill MetStream is a registered trademark of Gill Instruments.

www.gillinstruments.com

6.5.11 Thru Mode (Diagnostic Connection)

It is possible to communicate directly with a sensor attached to a MetStream using a terminal program, allowing you to view/log the raw sensor data in real time and if necessary re-configure the sensor.

NOTE: Data logging into the MetStream internal memory is DISABLED while Thru Mode is active.

Enable Thru Mode

Connect the sensor to MetStream and open the MetStream IP address GUI on a PC web browser as per examples in Paras 6.1 to 6.3.

Log in to Configuration screen and on the "Input Device Settings" check that is set to match the attached sensor (Auto for a MetPak). It is not necessary to setup the number of parameters or the fields. (If settings are changed it may be necessary to reload the page and log back into the configuration screen).


Click on the Network Settings Page which shows Thru Mode TCP Port Number e.g. 8023.

Click on the Enable Thru Mode button on the left hand side of the screen.

The following warning screen appears, Click on OK.

MetStream will now re-boot to enable Thru mode.

Note: The following warning screen does not warn when 1 minute is up; hence close the MetStream Web browser window after clicking on ok.

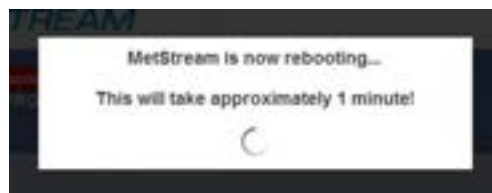

If required re-open the MetStream Web page e.g. 10.10.10.153 to confirm that Thru Mode has been enabled (see screen shot).


Close the Web Browser page connection.



Open a Telnet terminal programme e.g. HyperTerminal.

Type in a Name, e.g. MetStream Thru Mode.

Click on OK.

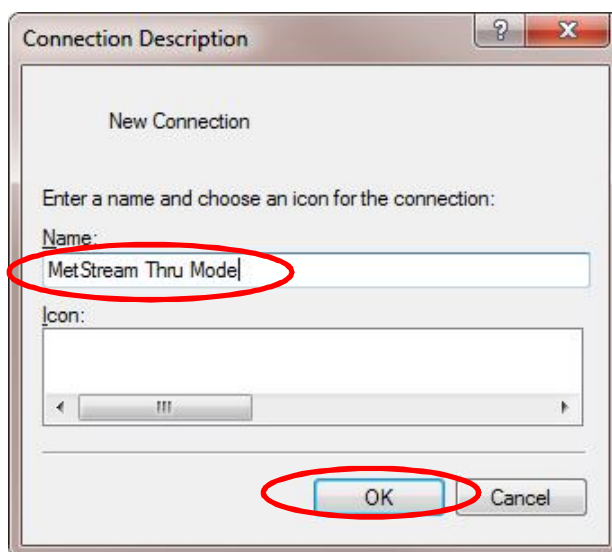


Type in the Host Address (MetStream IP address) for example 10.10.10.153


Type in the Port Number which for MetStream will be 8023.

Select Connect Using from the drop down list to be TCP/IP.

Click on OK.

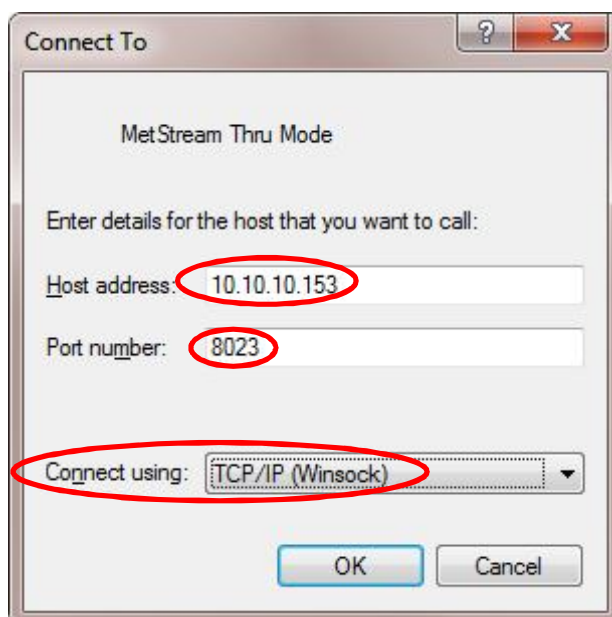

Data should now be scrolling on the Hyperterminal screen updated at the connected instrument output rate (MetPak Pro data illustrated).

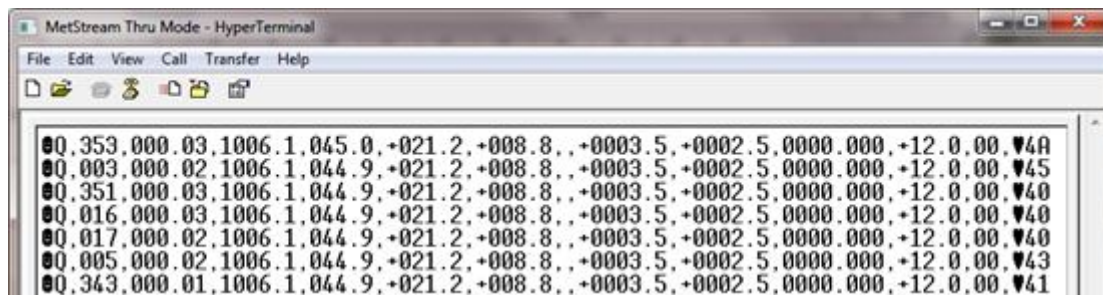

Should it be necessary to place the connected instrument into a Set Up mode/Configuration mode then send the necessary command (for Gill sensors this is the * command).

To interrogate the connected instrument:-


Type * to place the unit into Set up Mode (Enter key not needed).

The connected MetPak Pro unit has responded with SETUP MODE.

Refer to the connected Sensor Manual to determine which Configuration or Test commands are applicable for a terminal mode connection.

In this MetPak example the 'Report' command has been typed, the Enter key pressed and the unit has responded with the fields that it is reporting to MetStream.

Type Q and press Enter key to return to normal measurement mode.

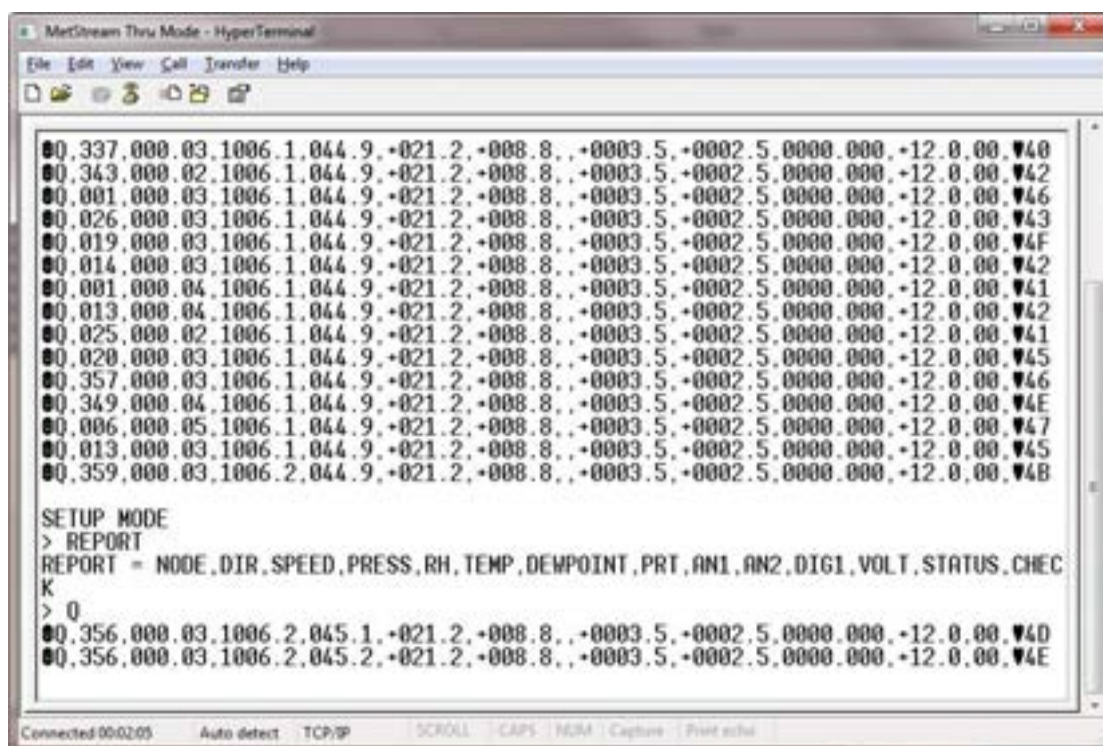

Logging Data


Hyperterminal can be used to log MetStream data (but note it will not add a Date/Time stamp to the data).

Start Logging

Select Transfer /Capture Text.

Then select Browse to choose a location/file on the PC to log the data.

Click on Start to commence data logging.

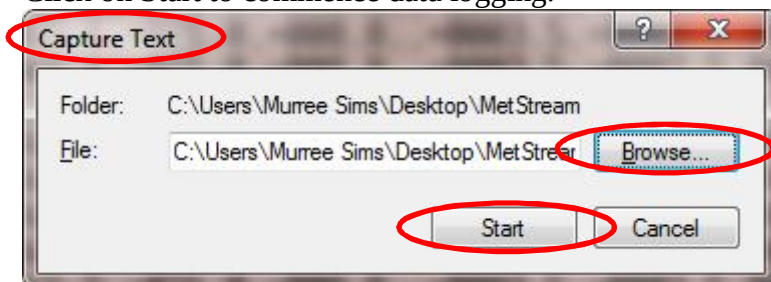


Stop Logging

Select Transfer/Capture Text/Stop.

Viewing Logged Data.


Open the saved data file location and view the text data e.g. using Notepad or similar.

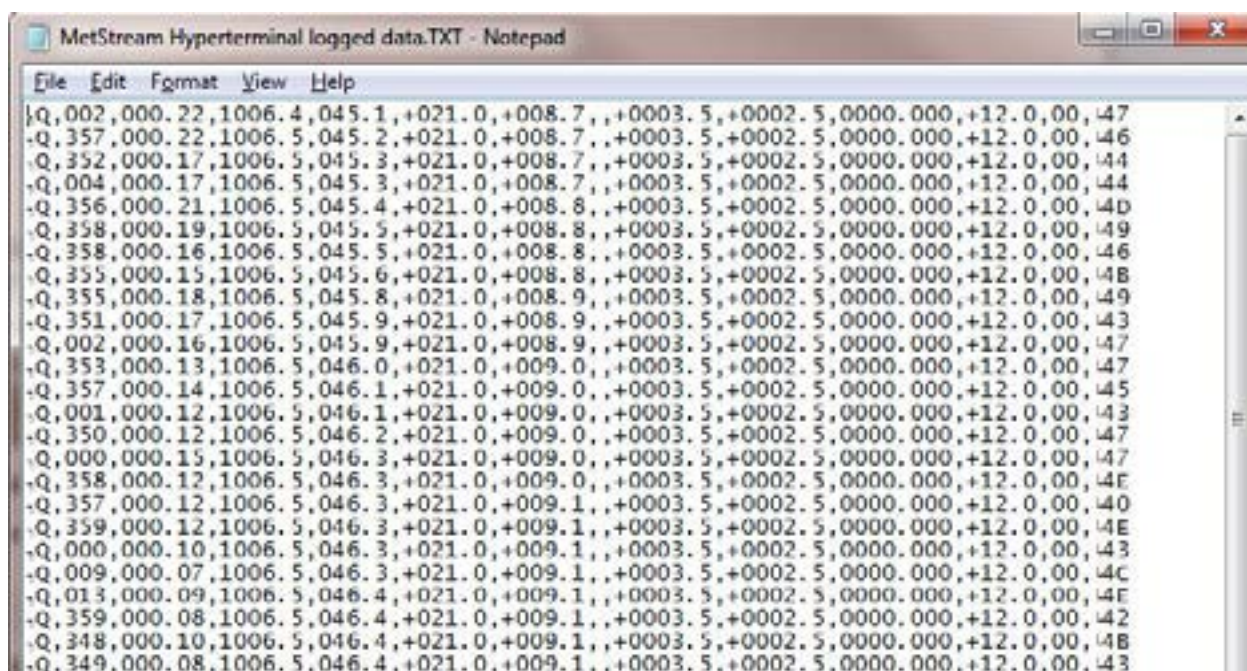


Disable Thru Mode

With any terminal connection to MetStream closed, open the Web Browser page and Log-In to the Configure pages.


Click on Disable Thru Mode.

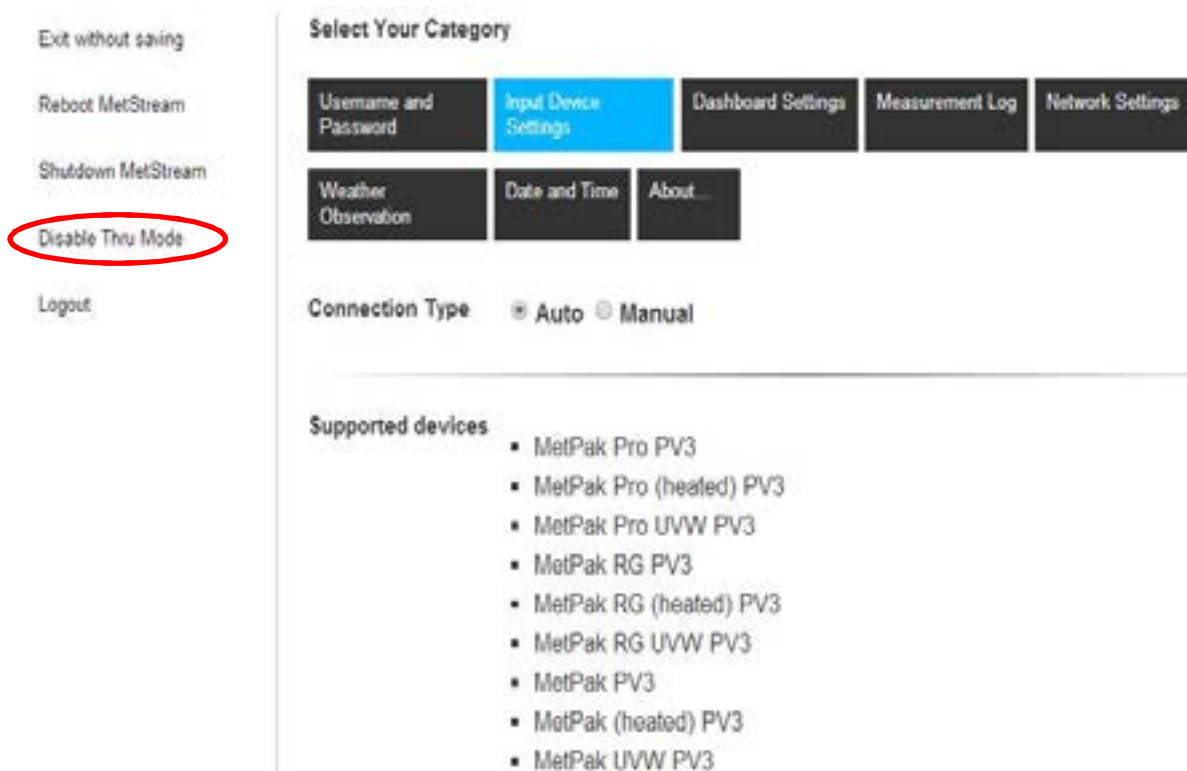

Click on OK.

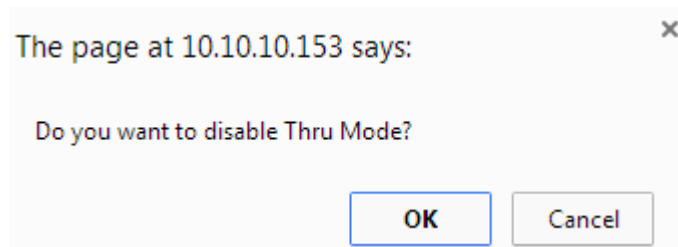

MetStream will now Re-Boot.

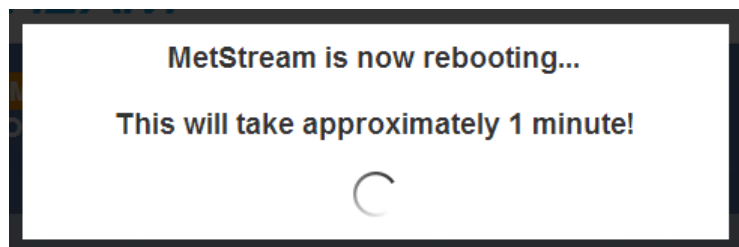

After 1 minute Refresh the Web Browser IP address page to view normal connected instrument data.

7. MAINTENANCE & FAULT-FINDING

7.1 Maintenance

There are no MetStream user-serviceable parts requiring routine maintenance.

Opening the unit will void the warranty.

In the event of failure, prior to returning the unit to your authorised Gill distributor, it is recommended that:

- All cables and connectors are checked for continuity, bad contacts, corrosion etc.
- Fault-finding checks are carried out as Para 7.2.
- Contact your supplier for advice if failure persists.

7.2 Fault-finding

To Support fault finding Gill Instruments Manuals can be downloaded from:-

<http://www.gillinstruments.com/data/manuals/manuals.htm>

Gill Instruments Software can be downloaded from:-

<http://www.gillinstruments.com/main/software.html>

Symptom	Action
Not able to open the GUI Display	• Check DC power is applied to the MetStream, the front panel Yellow LED should be constantly illuminated. • If the MetStream front panel Green LED is flashing then check the cabling between the connecting instrument and MetStream. • Check that there is a link between the MetStream 8 way connector terminals 6 (Power Enable) and 7 (0v). This supplies power to the connected instrument. • Check the MetStream Ethernet cable socket connection between MetStream the PC/Router/LAN. The Green LED should be constantly illuminated and the Yellow LED will flash showing data traffic. • Check that correct Ethernet cable type has been used (straight or crossover as appropriate). • Check that the correct IP address has been used. • Connect MetStream directly to a PC as detailed in Paras 6.1.1.or 6.1.2 and use IP address 192.168.67.67 to check MetStream operation and configuration.
Corrupted output	• Check cable lengths and type of cable. • Check connected instrument is installed as per its installation guidelines to avoid sources of interference.
MetStream GUI opens but does not display the connected instrument	• If the MetStream front panel Green LED is flashing then check the cabling between the connecting instrument and MetStream. • Check that there is a link between the MetStream 8 way connector terminals 6 (power Enable) and 7 (0v). • Is the unit set for Thru Mode? Disable Thru Mode. • Use Thru Mode to check communication with the connected sensor.
Incorrect GUI.	• Clear the Web Browser cache.

7.3 Returning Units

If the unit has to be returned, it should be carefully packed in the original packaging and returned to your authorised Gill distributor, with a full description of the fault condition.

Gill Instruments Distributors can be found at:-

http://www.gillinstruments.com/main/an_distributors.htm

The Return Maintenance Authorisation (RMA) procedure can be found at:-

<http://www.gillinstruments.com/products/anemometer/support.htm>

8. APPENDICES

8.1 Glossary & Abbreviations

Item	Meaning
BS	British Standard
CAT	Category
CD	Compact Disc
CFR	Code of Federal Regulations
CSV	Comma Separated Variable
DC	Direct Current
DHCP	Dynamic Name Host Protocol
DNS	Domain Name System
EC	European Community
EMC	Electro Magnetic Compatibility
EN	European Standard
FCC	Federal Communications Commission
GND	Ground
GUI	Graphical User Interface
IEEE	Institute of Electrical and Electronic Engineers
IP	Internet Protocol or Ingress Protection
LAN	Local Area Network
LED	Light Emitting Diode
MAC	Media Access Control
MAX	Maximum
MIN	Minimum
No.	Number
O/P	Output
NTP	Network Time Protocol
PC	Personal Computer
POE	Power over Ethernet
PTP	Precision Time Protocol
RJ	Registered Jack
RMA	Return Material Authorisation
RS232	Communications standard
RS422	Communications standard
RS485	Communications standard
RX	Receive
RXD	Received Data
SD	Secure Digital
STP	Shielded Twisted Pair
TCP	Transmission Control Protocol

Item	Meaning
TX	Transmit
TXD	Transmitted Data
TXT	Text
UL	Underwriters Laboratory
USB	Universal Serial Bus
UTP	Unshielded Twisted Pair
WLAN	Wireless Local Area Network
WOW	Weather Observation Website
+VE	Positive
-VE	Negative

8.2 Guarantee

For terms of guarantee contact your supplier.

Warranty is void if the black security seal covering MetStream box screws are damaged or broken.

8.3 Electrical Conformity

EC DECLARATION OF CONFORMITY ACCORDING TO COUNCIL DIRECTIVE 2004/108/EC



We, Gill Instruments Limited, declare our sole responsibility that the products:

MetStream 105

Manufactured by: Gill Instruments Limited
Saltmarsh Park
67 Gosport Street
Lymington, SO41 9EG

to which this declaration relates, are in conformity with the protection requirements of Council Directive 2004/108/EC on the approximation of the laws relating to electromagnetic compatibility.

This Declaration of Conformity is based upon compliance of the product with the following harmonized standards:

BS EN 55022:2010

BS EN 55024:2010

Emissions Using BS EN 61000

Immunity Using BS EN 61000

Signed by

A handwritten signature in black ink, appearing to read "A.C.R. Stickland".

A.C.R. Stickland – Director

Date of issue: 29/11/2013

Place of issue: Gill Instruments Limited
Saltmarsh Park
67 Gosport Street
Lymington, SO41 9EG

